



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2139	3882	BOTTOM COWL	1		
2		48472	COVER, PLUG - BOTTOM COWL	1		
3	10	20189	SCREW, PLUG COVER TO BOTTL	2		
4	32	34395A	HOSE, TELL TALE - COWL TO EX	1		
5	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
6		52889	NOZZLE, TELL TALE HOSE TO B	1		
7	10	35519	SCREW, NOZZLE TO BOTTOM C	1		
8	27	37976	GASKET, POWERHEAD TO EXHA	1		4
9		39622	SEAL, RUBBER - EXHAUST PLAT	1		
10		39449A	PLATE ASSEMBLY, EXHAUST EX	1		
11	12	38453	WASHER, NYLON - WATER OUL	1		
12	26	38452	SEAL, RUBBER - WATER OUTL	1		4
13		38500	RETAINER, WATER OUTLET T	1		
14	10	34439	SCREW, RETAINER TO EXHAU	1		
15	27	38501	GASKET, EXHAUST PLATE TO D	1		4
16	10	22421	SCREW, EXHAUST PLATE TO BC	1		
17	11	46887	NUT, EXHAUST PLATE SCREW	1		
18		37637	BOOT, FUEL CONNECTOR - BOT	1		
19		55170	COVER, VENT - BOTTOM COWL	1		
20	10	52867	SCREW, VENT COVER TO BOTTL	1		
21		39616	BOOT, CONTROL CABLE - BOTTC	1		
22		39630	CUSHION, RUBBER - BOTTOM CI	1		
23		39555A	COVER PLATE ASSEMBLY	1		
24		57596	PAD, SOUND - COVER PLATE	1		
25	10	30009	SCREW, COVER PLATE TO BOT	3		
26		56475A	STOP SWITCH ASSEMBLY MANI	1		
27		30859	INSULATOR, SLEEVE - INNER	1		
28	24	30858A	SPRING AND CONTACT ASSEM	1		
29		38950A	COVER ASSEMBLY, STOP SWI	1		
30	12	38949	WASHER, SEALING - STOP S	1		
31	13	21972	LOCKWASHER, STOP SWITCH	1		
32	11	21971	NUT, STOP SWITCH TO BOTTC	1		