



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	11	22339	NUT, FLYWHEEL	1	
2	12	36281	WASHER, FLYWHEEL NUT	1	
3	25	37340	"O" RING, FLYWHEEL HUB	1	4
4	28	45554	KEY, FLYWHEEL DRIVE	1	
5	235	3877A 2	FLYWHEEL ASSEMBLY	1	
6	10	35563	SCREW, FLEXIBLE PLATE TO F 8	1	
7	50	39838	RATCHET, FLYWHEEL	1	
8	10	32417	SCREW, RATCHET TO FLYWHI	8	
9	13	26992	LOCKWASHER, RATCHET SCR	2	
10	10	55181	SCREW, MAGNET HOLDER TO 4	1	
11	398	4423	STATOR, ALTERNATOR (MANUAL)	1	
11	398	4424	STATOR, ALTERNATOR (ELECT)	1	
12	10	56787	SCREW, STATOR TO UPPER EN	4	
13	13	58308	LOCKWASHER, STATOR SCREW	4	
14	13	30809	WASHER, WAVE - DISTRIBUTOR	1	
15	393	4665	ROTOR, DISTRIBUTOR	1	
16	393	4560	BODY, DISTRIBUTOR	1	
17	22	25885	ELBOW, VENT HOSE TO DISTRIB	1	
18	32	34395A 1	HOSE, VENT - DISTRIBUTOR (16	1	
19	22	31521	ELBOW, VENT HOSE TO BOTTOI	1	
20	54	22875	CLAMP, VENT HOSE	1	
21	10	30663	SCREW, VENT HOSE CLAMP AT	1	
22		22789	"D" WASHER, VENT HOSE CLAM	1	
23		47899A 9	LEAD ASSEMBLY, SPARK PLUG I	2	
24	33	57451	SPARK PLUG (AD #V-40FFM)	2	
24	33	61976	SPARK PLUG (AC #M-40FF)-SEE I	2	
25		47604A 1	PROTECTOR ASSEMBLY, SPARK	2	
26		60096	BOOT, SPARK PLUG LEAD	2	
27	25	56474	INSULATOR, SPARK PLUG LEAD	2	
28	54	57302	CLAMP, SPARK PLUG LEAD ATT,	2	
29	393	3295A 2	LEAD ASSEMBLY, IGNITION COIL	1	
30	332	2854	BOOT, LEAD TO IGNITION COIL	1	
31	54	22627	CLAMP, IGNITION COIL LEAD AT	1	
32	10	30663	SCREW, IGNITION COIL LEAD CL	1	
33		22789	"D" WASHER, ATTACHING CLAM	1	
34	332	4172A 1	SWITCH BOX ASSEMBLY, COMPI	1	
35	10	55650	SCREW, SWITCH BOX TO FRON	2	
36	10	45218	SCREW, GROUND WIRE TO SWI	1	
37	12	45075	WASHER, SWITCH BOX TERMIN	5	
38	11	45076	NUT, SWITCH BOX TERMINAL	5	
39	232	4075A 1	IGNITION COIL ASSEMBLY, COMI	1	