

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1,1,1		
2	12	26617	WASHER, FLYWHEEL NUT	1,1,1,1		
3	28	20094	KEY, FLYWHEEL DRIVE	1,1,1,1		
4	400	1650	CRANKSHAFT	1,1,1,1	SERIAL 00000000-01365967	
4	400	1730	CRANKSHAFT	1,1,1,1	SERIAL 01365968-09999999	
5	25	29619	"O" RING, DRIVE SHAFT SPLINE	1,1,1,1		
6	500	1030A 1	CENTER MAIN BEARING ASSEMBLY	1,1,1,1		
7	17	20032	DOWEL PIN, CENTER MAIN BEARING	2,2,2,2		
8	29	20046	BEARING, NEEDLE	56,56,1		(1)2, (2)2
8	29	20046T	BEARING, NEEDLE	28,28,2		
9		20047	RACE, OUTER	1,1,1,1		
10	53	20048	RING, SNAP - OUTER RACE	1,1,1,1		
11	10	20482	SCREW, CENTER MAIN BEARING	2,2,2,2		
12	17	20379	DOWEL PIN (STEPPED)	1,1,1,1		
13	526	1436A 1	MAIN BEARING ASSEMBLY (VALVE)	2,2,1		
14	17	20032	DOWEL PIN, MAIN BEARING	20,20,1		
15	10	20049	SCREW, MAIN BEARING CLAMPING	4,4,1		
13	527	1619A 1	MAIN BEARING ASSEMBLY (VALVE)	1,2,2		
14	17	20032	DOWEL PIN, MAIN BEARING	1,20,20		
15	10	26184	SCREW, MAIN BEARING CLAMPING	1,4,4		
--	11	24652	NUT, MAIN BEARING CLAMPING	1,4,4		
16	34	20888	REED SET, MATCHED - MAIN BEARING	2,2,2,2		
17	34	20053	REED STOP, MAIN BEARING REED	8,8,8,8		
18	12	26014	WASHER, REED STOP MOUNTING	8,8,1		
19	10	20055	SCREW, REED STOP MOUNTING	8,8,1		
19	10	29465	SCREW, REED STOP MOUNTING	1,8,8		
--	11	29469	NUT, REED STOP MOUNTING	1,8,8		
20	724	1631A 2	PISTON AND PISTON PIN ASSEMBLY	4,4,4,4		
21	40	20057	LOCK RING, PISTON PIN	8,8,8,8		
22	39	27841	RING, PISTON	12,12,1		
23	600	7A 4	CONNECTING ROD AND CAP ASSEMBLY	4,4,4,4		
24	10	20060	SCREW, CAP TO CONNECTING ROD	8,8,8,8		
25	11	20061	NUT, CONNECTING ROD SCREW	8,8,8,8		
26	29	20046	BEARING, NEEDLE - CRANK PIN	100,100,1		
27	29	20063	BEARING, NEEDLE - PISTON PIN	88,88,8		
28	12	28121	WASHER, NEEDLE LOCATING	8,8,8,8		
--	724	1663A 1	PISTON AND PISTON PIN ASSEMBLY	4,4,4,4		
--	39	28616	RING, PISTON (.015)	12,12,1		

