



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		29178A 2	FUEL PUMP ASSEMBLY	1,1,,	SERIAL 00000000-01362197	
2	27	23005	GASKET, CHECK VALVE TO HO	2,2,,		
3	21	20963	VALVE, CHECK	2,2,,		
4		23004	RETAINER, CHECK VALVE	1,1,,		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2,,		
6	27	24863	GASKET, FUEL PUMP	2,2,,		
7		23014	DIAPHRAGM, FUEL PUMP	1,1,,		
-	22	29380	PLUG, PIPE - FUEL PUMP	1,1,,		
1		30269A 2	FUEL PUMP ASSEMBLY	1,1,1,1	SERIAL 01362198-09999999	
2	27	23005	GASKET, CHECK VALVE TO HO	2,2,2,2		
3	21	30430	VALVE, CHECK	2,2,2,2		
4		23004	RETAINER, CHECK VALVE	1,1,1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2,2,2		
6	27	24863	GASKET, FUEL PUMP	2,2,2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1,1,1		
8		23008	COVER, FUEL PUMP	1,1,1,1		
9	27	30276	GASKET, FUEL PUMP COVER	1,1,1,1		
10	10	29126	SCREW, FUEL PUMP MOUNTING	2,2,2,2		
11	10	29029	SCREW, FUEL PUMP MOUNTING	1,1,1,1		
12	22	22949	CONNECTOR, PUMP INLET TO F	1,1,1,1		
13	22	22946	SLEEVE, RUBBER - CONNECTOF	1,1,1,1		
14	11	22948	NUT, CONNECTOR TO FUELK LI	1,1,1,1		
15	32	30035	FUEL LINE, FUEL PUMP TO LOW	1,1,1,1		
16	22	22995	ELBOW, FUEL PUMP INLET	1,1,1,1		
17	22	22946	SLEEVE, RUBBER	1,1,1,1		
18	11	22948	NUT, ELBOW	1,1,1,1		
19	32	30036	FUEL LINE, FUEL PUMP TO ADA	1,1,1,1		
20		22833	ADAPTOR, CHECK UNIT (FUEL LI	1,1,1,1		
21		23069	STEM, CHECK UNIT ADAPTOR	1,1,1,1		
22	25	20415	"O" RING, ADAPTOR STEM	1,1,1,1		
23	24	23067	SPRING, ADAPTOR STEM	1,1,1,1		
24		23068	CUP WASHER, ADAPTOR	1,1,1,1		
25	10	20784	SCREW, ADAPTOR TO BOTTOM	2,2,2,2		
26	11	24652	NUT, ADAPTOR SCREW	2,2,2,2		
--	22	25443	ELBOW, UPPER FILTER TO FUEL	1,1,,	USE WITH 29178A2 FUEL PUMP	
--	32	29194	FUEL LINE, UPPER TO LOWER F	1,1,,	USE WITH 29178A2 FUEL PUMP	
27	32	30038	FUEL LINE, UPPER TO LOWER F	1,1,1,1	(USE WITH 30269A2 FUEL PUMI	
28	22	25956	TEE ASSEMBLY, LOWER FILTER	1,1,1,1	(USE WITH 30269A2 FUEL PUMI	