



4251

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	394	1652A 1	MAGNETO ASSEMBLY, COMPLE	1,1,1,1		
1	394	1570	FRAME, MAGNETO HOUSING	1,1,1,1		
2	10	25510	SCREW, SET - COIL BRIDGE	2,2,2,2		
3	394	1051	LOCKWIRE, COIL BRIDGE SET	1,1,1,1		
4	30	24998	BEARING, BALL (DRIVE END)	1,1,1,1		
5	394	1067	MAGNETIC ROTOR AND SHAF	1,1,1,1		
6	30	24997	BEARING, BALL (OPPOSITE DR	1,1,1,1		
7	394	1637	SUPPORT, BALL BEARING	1,1,1,1		
8	10	25509	SCREW AND LOCKWASHER, S	3,3,3,3		
9	394	1053A 1	WIRE ASSEMBLY, PRIMARY GF	1,1,1,1		
10	10	29182	SCREW, PRIMARY GROUND (H	1,1,1,1		
11	12	30267	WASHER, PRIMARY GROUND	1,1,1,1		
12	394	1579	INSULATOR, PRIMARY GROUN	1,1,1,1		
13	12	29099	WASHER, INSULATING - PRIMA	1,1,1,1		
14	23	29101	BUSHING, INSULATING - HOUS	1,1,1,1		
15	12	26014	WASHER, PRIMARY GROUND	1,1,1,1		
16	11	24656	NUT, LOCK - PRIMARY GROUN	1,1,1,1		
17	11	20645	NUT, PRIMARY GROUND SCRE	1,1,1,1		
18	394	1128A 1	COIL ASSEMBLY	1,1,1,1		
19	394	1050	CLIP, COIL - HIGH TENSION	1,1,1,1		
20	13	23836	LOCKWASHER, COIL TERMIN	1,1,1,1		
21	394	1131	NUT, COIL CLIP FASTENING	1,1,1,1		
22	393	1504A 6	BREAKER ASSEMBLY	1,1,1,1		
23	393	1586	GROMMET, PLASTIC - BREAK	1,1,1,1		
24	16	29230	STUD, PRIMARY LEAD AND T	1,1,1,1		
25	11	29236	NUT, PRIMARY LEAD FASTEN	1,1,1,1		
26	394	1106A 1	HOLDER AND CAM WICK ASS	1,1,1,1		
27	12	26439	WASHER, BREAKER PIVOT F	1,1,1,1		
28	18	26953	COTTER PIN, BREAKER TO F	1,1,1,1		
29	10	20597	SCREW, BREAKER HOLDER	1,1,1,1		
30	394	1130	CONDENSER	1,1,1,1		
31	10	25509	SCREW AND LOCKWASHER, C	1,1,1,1		
32	27	29166	GASKET, MAGNETO COVER	1,1,1,1		
33	394	1577	COVER, MAGNETO	1,1,1,1		
34	10	29418	SCREW, COVER TO FRAME	4,4,4,4		
35	14	29157	TAB WASHER, COVER FASTEN	4,4,4,4		
36	394	1671A 1	MAGNETO ROTOR ASSEMBLY	1,1,1,1		
37	394	1110	CLIP, SPRING	1,1,1,1		
38	27	25725	GASKET, END CAP OVER	1,1,1,1		
39	394	1561A 1	END CAP COVER ASSEMBLY	1,1,1,1		
40	394	1056A 1	LEAD ASSEMBLY, HIGH TEN	1,1,1,1		