



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A 1	RECTIFIER ASSEMBLY	1	UNITED STATES 3474577 AND I	
1		62351A 2	RECTIFIER ASSEMBLY	1	UNITED STATES 3474578 AND I	
2	10	25764	SCREW, RECTIFIER TO FRONT	2		
3	11	27164	NUT, RECTIFIER FASTENING SC	2		
4	23	62769	SPACER, RECTIFIER TERMINAL	1		
5	11	45076	NUT, RECTIFIER TERMINAL (10<	3		
6		54293A 5	CHOKE SOLENIOD ASSEMBLY	1		
7	10	26065	SCREW, CHOKE SOLENIOD TO F	2		
8	11	46793	NUT, SOLENOID SCREW	2		
9	13	26993	LOCKWASHER, CHOKE SOLENO	1		
10	11	45076	NUT, CHOKE SOLENIOD TERMIN	1		
11		56074A 2	PLUNGER ASSEMBLY, CHOKE SI	1		
12	84	61393A 1	LEAD ASSEMBLY, RECTIFIER TO	1		
13	85	62453	BOOT, LEAD WIRE	1		
14	19	35827	PLUG, BOTTOM COWL	1	PART OF BOTTOM COWL ASSE	
15	53	30428	FASTENER, PLUG TO BOTTOM C	1	PART OF BOTTOM COWL ASSE	
16		34228	SUPPORT, EXTERNAL WIRING H	1		
17	10	67197	SCREW, SUPPORT TO BOTTOM	1		
18		52907	INSULATOR, SUPPORT TO BOT	1		
19	11	46887	NUT, SUPPORT FASTENING SCR	1		
20	10	20776	SCREW, WIRING HARNESS GRC	1		
21	13	24669	LOCKWASHER, WIRING HARNE	1		
22	84	62534	WIRING HARNESS (INTERNAL)	1	UNITED STATES 3859434 AND I	
22	84	66297	WIRING HARNESS (INTERNAL)	1	UNITED STATES 3859435 AND I	
23	54	52876	CLAMP, WIRING HARNESS ATTA	1		
24	10	61802	SCREW, WIRING HARNESS CLAI	2		
25	24	28975	SPRING, GARTER - INTERNAL W	1		
26	50	55601	STARTER MOTOR ASSEMBLY	1		
27	10	35213	SCREW, STARTER MOTOR TO C	2		
28	13	26992	LOCKWASHER, CABLE TO STAR	1		
29	11	20890	NUT, CABLE TO STARTER MOT	1		
30		56466	CABLE, STARTER MOTOR TO ST	1		
31		32107	GROUND WIRE, STARTER MOT	1		
32	10	29197	SCREW, GROUND WIRE TO STA	1		
33		25661	SOLENOID, STARTER	1		
34	10	21625	SCREW, STARTER SOLENOID TI	2		
35	13	26992	WASHER, STARTER SOLENOID	2		
36	13	26996	LOCKWASHER, STARTER SOLE	2		
37	11	20645	NUT, STARTER SOLENOID TERM	2		
38		38938	BOOT, RUBBER - STARTER SOLI	2		
39	13	26992	LOCKWASHER, STARTER SOLE	2		