



STARTER HOUSING

| Parts List | | | | | | |
|------------|-------|----------|------------------------------|-----|-----------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 14 | 61004 | TAB WASHER, SHEAVE SHAFT N | 1 | | |
| 2 | 11 | 20166 | NUT, SHEAVE SHAFT (LEFT HAN | 1 | | |
| 3 | 25 | 39597 | GROMMET, STARTER HOUSING | 2 | | |
| 4 | | 59139A 1 | CABLE ASSEMBLY, INTERLOCK | 1 | MANUAL | |
| 5 | 10 | 32228 | SCREW, INTERLOCK CABLE TO I | 1 | MANUAL | |
| 6 | 10 | 20100 | SCREW, INTERLOCK CABLE TO : | 1 | MANUAL | |
| 7 | 13 | 27660 | LOCKWASHER, INTERLOCK CAB | 1 | MANUAL | |
| 8 | 12 | 26013 | WASHER, INTERLOCK CABLE SC | 2 | MANUAL | |
| 9 | | 57236 | CAM, SLIDING - STARTER HOUS | 1 | MANUAL | |
| 10 | 24 | 57248 | SPRING, SLIDING CAM | 1 | MANUAL | |
| 11 | 12 | 37998 | WASHER, INTERLOCK CABLE | 1 | MANUAL | |
| 12 | 18 | 26953 | COTTER PIN, INTERLOCK CABLE | 1 | MANUAL | |
| 13 | | 57243 | TOGGLE, STARTER INTERLOCK | 1 | MANUAL UNITED STATES 3859 | |
| 13 | | 65757A 1 | TOGGLE ASSEMBLY, STARTER I | 1 | MANUAL UNITED STATES 3859 | |
| 14 | 10 | 57249 | SCREW, TOGGLE TO STARTER I | 1 | MANUAL | |
| 15 | 23 | 26856 | BUSHING, TOGGLE SCREW | 2 | MANUAL | |
| 16 | 24 | 57279 | SPRING, TOGGLE SCREW | 1 | MANUAL | |
| 17 | | 55860 | PULLEY, STARTER SCREW | 1 | | |
| 18 | 10 | 45210 | SCREW, PULLEY TO STARTER F | 1 | | |
| 19 | 12 | 22887 | WASHER, PULLEY SCREW | 2 | | |
| 20 | 23 | 30977 | SPACER, PULLEY SCREW | 1 | | |
| 21 | 11 | 24656 | NUT, PULLEY SCREW | 1 | | |
| 22 | 2140 | 4415 | HOUSING, STARTER | 1 | | |
| 23 | 10 | 37562 | SCREW, STARTER HOUSING TO | 2 | | |
| 24 | 13 | 26993 | LOCKWASHER, STARTER HOUS | 2 | | |
| 25 | | 61002 | RETAINER, STARTER REWIND | 1 | | |
| 26 | 24 | 39502A 1 | SPRING, STARTER REWIND | 1 | | |
| 27 | 23 | 63100 | BUSHING, SPRING GUIDE | 1 | | |
| 28 | 50 | 62237A 1 | STARTER SHEAVE ASSEMBLY | 1 | UNITED STATES 3859434 AND I | |
| 28 | 50 | 66855A 1 | STARTER SHEAVE ASSEMBLY | 1 | UNITED STATES 3859435 AND I | |
| 29 | | 30596 | PAWL, STARTER | 3 | | |
| 30 | 13 | 36206 | WASHER, WAVE - STARTER PAW | 3 | | |
| 31 | 23 | 63061 | SPACER, SHEAVE SHAFT | 1 | | |
| 32 | | 39840 | RETAINER, WAVE WASHER | 1 | | |
| 33 | 12 | 57837 | WASHER, WAVE WASHER RETA | 1 | | |
| 34 | 13 | 20160 | WASHER, WAVE - RETAINER TE | 1 | | |
| 35 | | 63101 | PLATE, RETAINER - STARTER P, | 1 | UNITED STATES 3859434 AND I | |
| 36 | 24 | 26068 | SPRING, RETAINER PLATE TO S | 1 | UNITED STATES 3859434 AND I | |
| 35 | | 66845 | PLATE, RETAINER - STARTER P, | 1 | UNITED STATES 3859435 AND I | |
| 36 | 24 | 66853 | SPRING, RETAINER PLATE TO S | 1 | UNITED STATES 3859435 AND I | |
| 37 | | 66848 | RETAINER, SPRING | 2 | | |