

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2139	3882	BOTTOM COWL	1	UNITED STATES 3344829 AND I	
1	2139	4618A 3	BOTOTM COWL	1	UNITED STATES 3344830 THRL	
1	2139	5351A 2	BOTTOM COWL	1	UNITED STATES 3859435 AND I	
2		48472	COVER, PLUG - BOTTOM COWL	1		
3	10	61802	SCREW, PLUG COVER TO BOT	2		
4	27	62860	GASKET, POWERHEAD TO EXH	1		1,2,4
5		39622	SEAL, RUBBER - EXHAUST PLAT	1		
6		62861A 1	PLATE ASSEMBLY, EXHAUST EX	1		
7	12	38453	WASHER, NYLON - WATER OUT	1		
8	26	38452	SEAL, RUBBER - WATER OUTL	1		2,4
9		38500	RETAINER, WATER OUTLET T	1		
10	10	34439	SCREW, RETAINER TO EXHAU	1		
11	27	38501	GASKET, EXHAUST PLATE TO D	1		1,2,4
12	10	22421	SCREW, EXHAUST PLATE TO BC	1	UNITED STATES 3859434 AND I	
13	11	46887	NUT, EXHAUST PLATE SCREW	1	UNITED STATES 3859434 AND I	
14		37637	BOOT, FUEL CONNECTOR - BOT	1		
15		39616	BOOT, CONTROL CABLE - BOTTC	1		
16		39630	CUSHION, RUBBER - BOTTOM CI	1		
17		39555A 1	COVER PLATE ASSEMBLY	1		
18		39556	PAD, SOUND - COVER PLATE	1		
19	10	30009	SCREW, COVER PLATE TO BOT	3		
20		59065A 4	STOP SWITCH ASSEMBLY	1	MANUAL ONLY	
21	24	60239	SPRING, STOP SWITCH	1	MANUAL ONLY	
22	87	61577A 1	CONTACT ASSEMBLY, STOP S	1	MANUAL ONLY	
23		38950A 1	COVER ASSEMBLY, STOP SWITC	1	MANUAL ONLY	
24	12	59061	WASHER, STOP SWITCH	1	MANUAL ONLY	
25	13	26996	LOCKWASHER, STOP SWITCH	1	MANUAL ONLY	
26	11	20645	NUT, GROUND LEAD TO STOP S	1	MANUAL ONLY	
27	12	61542	WASHER, CONNNECTOR BASE	1	MANUAL ONLY UNITED STATES	
27	12	64275	WASHER, CONNECTOR BASE	1	MANUAL ONLY UNITED STATES	
28	13	21972	LOCKWASHER, CONNECTOR BA	1	MANUAL ONLY	
29	11	21971	NUT, CONNECTOR BASE TO BO	1	MANUAL ONLY	
30	84	63086A 1	WIRE ASSEMBLY, STOP SWITCH	1	MANUAL ONLY UNITED STATES	
30	84	63086A 2	WIRE ASSEMBLY, STOP SWITCH	1	MANUAL ONLY UNITED STATES	
31	54	26550	CLAMP, STOP SWITCH LEAD	1	MANUAL ONLY	
32	10	30663	SCREW, STOP SWITCH LEAD CL	1	MANUAL ONLY	
33		22789	"C" WASHER, STOP SWITCH LE	1	MANUAL ONLY	

