



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1		
2	12	36258	WASHER, FLYWHEEL NUT	1		
3	28	45554	KEY, FLYWHEEL DRIVE	1		
4	242	4764A 7	FLYWHEEL ASSEMBLY	1	UNITED STATES 4726797 AND I	
4	242	4764A16	FLYWHEEL ASSEMBLY (MANUAL	1	UNITED STATES 4726798 AND I	
4	242	4764A15	FLYWHEEL ASSEMBLY (ELECTR	1	UNITED STATES 4726798 AND I	
5	10	32417	SCREW, FLEXIBLE PLATE TO F	8		
6	50	65213	RATCHET, FLYWHEEL	1		
7	10	69088	SCREW, RATCHET TO FLYWHI	8	UNITED STATES 4362214 AND I	
7	10	38398	SCREW, RATCHET TO FLYWHI	8	UNITED STATES 4362215 AND I	
8	13	20202	LOCKWASHER, RATCHET SCR	2		
9	398	5256	STATOR, IGNITION (MANUAL)	1		
9	398	5255	STATOR, ALTERNATOR (ELECTF	1		
10	10	56787	SCREW, STATOR TO UPPER EN	4		
11	13	26996	LOCKWASHER, STATOR SCREW	4		
12		61830	STATOR SUPPORT	1		
13	12	62133	WASHER, TRIGGER TO STATOR	1		
14	13	61983	WASHER, WAVE - TRIGGER TO	1		
15	12	61982	WASHER, TRIGGER TO STATOR	1		
16	338	4731A 6	TRIGGER PLATE ASSEMBLY	1		
17	24	62095	SPRING, COMPRESSION	1		
18	17	62768	PIN, SPRING RETENTION	1		
19	54	54457	"J" CLIP, TRIGGER LEADS TO RL	1		
20	339	5288A 2	IGNITION COIL ASSEMBLY, COMI	2	UNITED STATES 4362214 AND I	
20	339	5748A 2	IGNITION COIL ASSEMBLY, COMI	2	UNITED STATES 4362215 AND I	
21	23	62769	SPACER, COIL SWITCH BOX LEA	2		
23	11	45076	NUT, COIL TERMINALS	4		
24	84	60466A 1	GROUND WIRE, COIL GROUND	2		
25		76254	COVER, IGNITION COIL	2		
26	10	69002	SCREW, COIL COVER TO COIL BI	2		
26	10	60194	SCREW, COIL COVER TO COIL BI	4		
27	84	63212A 2	LEAD ASSEMBLY, SPARK PLUG I	2		
28	33	57451	SPARK PLUG (AC#V40FFM)	2		
29	85	71006A 1	PROTECTOR ASSEMBLY, SPARK	2		
30	332	2854	BOOT, LEAD TO IGNITION COIL	2		
31	332	4911A 5	SWITCH BOX ASSEMBLY, COMPI	1		
32	54	54457	"J" CLIP, SWITCH BOX LEADS	2		
33	10	69067	SCREW, SWITCH BOX "J" CLIP T	2		
34	10	45218	SCREW, TERMINAL BLOCK AND	6		
35	86	66754	TERMINAL BLOCK, SWITCH BOX	1		
36	10	20646	SCREW, TERMINAL BLOCK ATT	2		