



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62973A 4	FUEL PUMP ASSEMBLY	1		
2	21	30430A 3	CHECK VALVE ASSEMBLY	1		
3		55278A 1	DIAPHRAGM KIT	1		1,2,4
4			GASKET, CHECK VALVE TO	2		1,2,4
5			GASKET, FUEL PUMP	2		1,2,4
6		23004	RETAINER, CHECK VALVE	1		
7	10	20037	SCREW, RETAINER TO HOUSII	2		
8	10	34633	SCREW, FUEL PUMP MOUNTING	3		
9	22	32802	PLUG, PIPE - FUEL PUMP	1		
10	32	65521	HOSE ASSEMBLY, FUEL PUMP T	1	UNITED STATES 3859434 AND I	
11		64703	NOZZLE, TELL TALE HOSE TO B	1	UNITED STATES 3859434 AND I	
10		66846	HOSE AND NOZZLE, TELL TALE	1	-- PART OF A-2139-5351A2 BOTTO	
10A		66849	CLAMP, TELL TALE HOSE AND N	1	-- PART OF A-2139-5351A2 BOTTO	
12	10	35519	SCREW, NOZZLE TO BOTTOM C	1	PART OF A-2139-5351A2 BOTTO	
13	32	34395A 1	HOSE ASSEMBLY, CYLINDER BL	1		
14	54	20386	CLAMP, HOSE	3		
15	22	29111	FITTING, TELL TALE - BLOCK TO	1		
16	32	55828A 1	FUEL LINE, FUEL PUMP TO CARB	1		
17	22	29085	FITTING, FUEL LINE TO CARBUR	1		
18	22	30174	ELBOW, PUMP INLET TO FUEL L	1		
19	22	30175	SLEEVE, RUBBER - ELBOW	1		
20	22	30177	NUT, ELBOW TO FUEL LINE	1		
21	32	56367	FUEL LINE, FUEL PUMP TO ADAF	1		
22		22833	ADAPTOR, CHECK UNIT (FUEL P	1		
23		23069	STEM, CHECK UNIT ADAPTOR	1		
24	25	20415	"O" RING, ADAPTOR STEM	1		1,2,4
25	24	23067	SPRING, ADAPTOR STEM	1		
26		30188	CUP WASHER, ADAPTOR	1		
27	10	56500	SCREW, ADAPTOR TO BOTTOM	2		
28	11	46887	NUT, ADAPTOR SCREW	2		