



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62973A 4	FUEL PUMP ASSEMBLY	1		
2	21	30430A 3	CHECK VALVE ASSEMBLY	1		
3		55278A 1	DIAPHRAGM KIT	1		4
4			GASKET, CHECK VALVE TO	2		4
5			GASKET, FUEL PUMP	2		4
6		23004	RETAINER, CHECK VALVE	1		
7	10	98789	SCREW, RETAINER TO HOUSING	2		
8	10	69093	SCREW, FUEL PUMP MOUNTING	3		
9	22	32802	PLUG, PIPE-FUEL PUMP	1		
10		69791A 2	HOSE AND NOZZLE, TELL TALE-	1		
11		66849	CLAMP, TELL TALE HOSE AND NI	1		
12	32	34395A 1	HOSE ASSEMBLY, CYLINDER BLC	1		
13	54	20386	CLAMP, HOSE	3		
14	22	29111	FITTING, BLOCK TO FUEL PUMP I	1		
15	22	70800	ELBOW, PUMP INLET TO FUEL LI	1		
16	22	30175	SLEEVE, RUBBER-ELBOW	1		
17	22	30177	NUT, ELBOW TO FUEL LINE	1		
18	32	56367	FUEL LINE, FUEL PUMP TO ADAF	1		
19		22833	ADAPTOR, CHECK UNIT (FUEL P	1		
20		23069	STEM, CHECK UNIT ADAPTOR	1		
21	25	20415	"O" RING, ADAPTOR STEM	1		4
22	24	23067	SPRING, ADAPTOR STEM	1		
23		30188	CUP WASHER, ADAPTOR	1		
24	10	56500	SCREW, ADAPTOR TO BOTTOM I	2		
25	11	35045	NUT, ADAPTOR SCREW	2		
26	22	70007	FITTING, FUEL	1		
27	54	68424	CLAMP, FUEL LINE ATTACHING	4		
28	32	63146	FUEL LINE, FUEL PUMP TO FILT	1		
29		70929	BASE, FUEL PUMP	1		
30	10	71913	SCREW, BASE TO TRANSFER PO	1		
31	35	59072	SCREEN, FILTER-INLET	1		4
32	25	47386	"O" RING, COVER TO HOUSING	1		4
33		59071	COVER, FUEL INLET	1		
34	27	25848	GASKET, NYLON-FILTER COVER	1		4
35	10	37370	SCREW, COVER TO FUEL PUMP I	1		
36	22	64705	FITTING, FILTER BASE	1		
37	32	63146	FUEL LINE, FILTER COVER TO BA	1		
38	22	64704	FITTING, ELBOW-CARBURETOR	1		
39	10	48408	SCREW, CLAMP TO BOTTOM COV	1		