

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	14	61004	TAB, WASHER, SHEAVE SHAFT	1		
2	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1		
3	25	39597	GROMMET, STARTER HOUSING	2		
4		76141	CALBE ASSEMBLY, INTERLOCK	1	MANUAL	
5	10	32228	SCREW, CABLE TO EXHAUST PL	1	MANUAL	
6	10	69022	SCREW, CABLE TO STARTER HC	1	MANUAL	
7		85188	CAM, INTERLOCK	1	MANUAL	
8	10	76138	SCREW, INTERLOCK CAM ATTACH	1	MANUAL	
9	24	76140	SPRING, INTERLOCK CAM SCREW	1	MANUAL	
10		79371	ACTUATOR, INTERLOCK	1	MANUAL	
11	10	76137	SCREW, INTERLOCK ACTUATOR	1	MANUAL	
12	24	76139	SPRING, INTERLOCK ACTUATOR	1	MANUAL	
13	12	30191	WASHER, INTERLOCK CABLE	1	MANUAL	
14	18	27769	COTTER PIN, INTERLOCK CABLE	1	MANUAL	
15		55860	PULLEY, STARTER SCREW	1		
16	10	45210	SCREW, PULLEY TO STARTER F	1		
17	12	22887	WASHER, PULLEY SCREW	2		
18	23	30977	SPACER, PULLEY SCREW	1		
19	11	24656	NUT, PULLEY SCREW	1		
20		76080A	HOUSING, STARTER	1		
21	10	37562	SCREW, STARTER HOUSING TO	2		
22	13	37562	LOCKWASHER, STARTER HOUS	2		
23		61002	RETAINER, STARTER REWIND	1		
24	24	39502A	SPRING, STARTER REWIND	1		
25	23	63100	BUSHING, SPRING GUIDE	1		
26		76053A	STARTER SHEAVE ASSEMBLY	1		
27		30596	PAWL, STARTER	3		
28	13	36206	WASHER, WAVE - STARTER PAW	3		
29	23	63061	SPACER, SHEAVE SHAFT	1		
30		39840	RETAINER, WAVE WASHER	1		
31	12	57837	WASHER, WAVE WASHER RETA	1		
32	12	57837	WASHER, WAVE - RETAINER TE	1		
33		66845	PLATE, RETAINER - STARTER P	1		
34	24	66853	SPRING, RETAINER TO STARTE	1		
35		66848	RETAINER, SPRING	2		
36	12	57860	WASHER, SHEAVE SHAFT	1		
37		61003	SHAFT, SHEAVE	1		
38	50	28985A	STARTER ROPE ASSEMBLY	1		
38		47341A	STARTER ROPE ASSEMBLY	1	FOR MANUAL STARTING	
39		77997A	RETAINER, STARTER ROPE	1	SERIAL GROUP #1	
40		77998	HANDLE, STARTER ROPE	1	SERIAL GROUP #1	

