
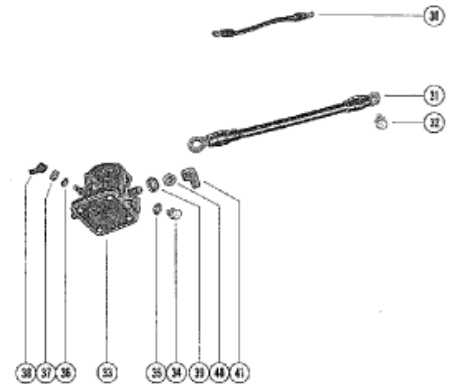
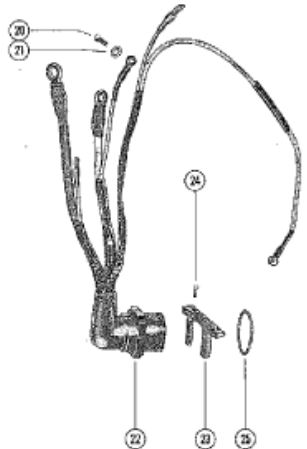
 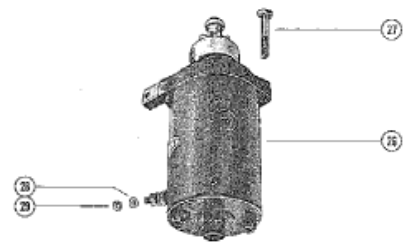


ELECTRIC ONLY



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A	RECTIFIER ASSEMBLY	1		
2	10	25764	SCREW, RECTIFIER TO FRONT	2	(1/2")	
3	11	73231	NUT, RECTIFIER FASTENING SC	2		
5	11	45076	NUT, RECTIFIER TERMINAL (10-)	3		
6		54293A	CHOKE SOLENOID ASSEMBLY	1		
7	10	25299	SCREW	2	CHOKE SOLENOID FRONT SUPI	
9	13	26996	LOCKWASHER, CHOKE SOLEND	1		
10	11	45076	NUT, CHOKE SOLENOID TERMIN	1		
11		56074A	PLUNGER ASSEMBLY, CHOKE SI	1		
12	84	61393A	LEAD ASSEMBLY	1	RECTIFIER TO STARTER SOLEI	
13	85	62453	BOOT, LEAD WIRE	1		
14	19	35827	PLUG, BOTTOM COWL	1	PART OF BOTTOM COWL ASSE	
15	53	30428	FASTENER, PLUG TO BOTTOM C	1	PART OF BOTTOM COWL ASSE	
16		34228	SUPPORT, EXTERNAL WIRING F	1		
17	10	67917	SCREW, SUPPORT TO BOTTOM	1		
18		52907	INSULATOR, SUPPORT TO BOT	1		
19	11	35888	NUT, SUPPORT FASTENING SCF	1		
20	10	69052	SCREW	1	WIRING HARNESS GROUND TC	
21	13	24669	LOCKWASHER, WIRING HARNE	1		
22	84	73826	WIRING HARNESS (INTERNAL)	1		
23	54	76368	CLAMP, WIRING HARNESS ATTA	1		
24	10	69013	SCREW	2	WIRING HARNESS CLAMP TO B	
25	24	28975	SPRING, GARTER - INTERNAL W	1		
26	50	55601A	STARTER MOTOR ASSEMBLY	1		
27	10	35213	SCREW, STARTER MOTOR TO C	2		
28	13	26993	LOCKWASHER, CABLE TO STAR	1		
29	11	20890	NUT, CABLE TO STARTER MOTC	1		
30		56466	CABLE, STARTER MOTOR TO ST	1	(YELLOW)	
31		32107	GROUND WIRE	1	STARTER MOTOR TO FRONT S	
32	10	69035	SCREW, GROUND WIRE TO STA	1		
33		25661	SOLENOID, STARTER	1		
34	10	69028	SCREW, STARTER SOLENOID TI	2	SUPPORT BRACKET (3/4")	
35	13	26992	WASHER, STARTER SOLENOID	2		
36	13	26996	LOCKWASHER, STARTER SOLEI	2	(#10)	
37	11	68219	NUT, STARTER SOLENOID TERM	2	(#10)	
38		38938	BOOT, RUBBER - STARTER SOLI	2	(SMALL)	
39	13	26993	LOCKWASHER, STARTER SOLEI	2	(5/16")	
40	11	20083	NUT, STARTER SOLENOID TERM	2		
41		46265	BOOT, RUBBER - STARTER SOLI	1	(LARGE)	
42	54	24871	CLAMP, CHOKE SOLENOID LEAD	1		
43		22289	LOCKWASHER, LEAD WIRE CLAM	1		