



## Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		62973A 4	FUEL PUMP ASSEMBLY	1		
2	21	30430A 3	CHECK VALVE ASSEMBLY	1		
3		55278A 1	DIAPHRAGM KIT	1		9
4			GASKET, CHECK VALVE TO	2		9
5			GASKET, FUEL PUMP	2		9
6		23004	RETAINER, CHECK VALVE	1		
7	10	68789	SCREW, RETAINER TO HOUSII	2		
8	10	69093	SCREW, FUEL PUMP MOUNTING	3		
9	22	32802	PLUG, PIPE - FUEL PUMP	1		
10		69791A 2	HOSE AND NOZZLE, TELL TALE	1	PART OF BOTTOM COWL ASSE	
11		66849	CLAMP, TELL TALE HOSE AND N	1	PART OF BOTTOM COWL ASSE	
12	32	34395A 1	HOSE ASSEMBLY, CYLINDER BL	1	(11")	
14	22	29111	FITTING, BLOCK TO FUEL PUMP	1		
15	22	64705	FITTING, PUMP INLET	1		
17	22	63187	FITTING, FUEL LINE TO ADAPTO	1		
18	32	70432	FUEL LINE, FUEL PUMP TO ADAF	1		
19		22833	ADAPTOR, CHECK UNIT (FUEL P	1		
20		23069	STEM, CHECK UNIT ADAPTOR	1		
21	25	20415	"O" RING, ADAPTOR STEM	1		9
22	24	23067	SPRING, ADAPTOR STEM	1		
23		30188	CUP WASHER, ADAPTOR	1		
24	10	56500	SCREW, ADAPTOR TO BOTTOM	2		
25	11	36069	NUT, ADAPTOR SCREW	2		
26	22	64704	ELBOW, PUMP OUTLET (90)	1		
27	54	68424	CLAMP, FUEL LINE ATTACHING	8		
28	32	70432	FUEL LINE, FUEL PUMP TO FILTE	1		
29		70929	BASE, FUEL PUMP	1		
30	10	71913	SCREW, BASE TO TRANSFER PC	1		
31	35	59072	SCREEN, FILTER - INLET	1		9
32	25	47386	"O" RING, COVER TO HOUSING	1		9
33		59071	COVER, FUEL INLET	1		
34	27	25848	GASKET, NYLON - FILTER COVER	1		9
35	10	37370	SCREW, COVER TO FUEL PUMP	1		
36	22	64705	FITTING, FILTER BASE	1		
37	32	70432	FUEL LINE, FILTER COVER TO PI	1		
38	22	64704	FITTING, ELBOW - CARBURETOR	1		
39	10	48409	SCREW, CLAMP TO BOTTOM CO	1		