



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2139	6424A 1	BOTTOM COWL	1		
2		48472	COVER, PLUG - BOTTOM COWL	1	MANUAL	
3	10	61802	SCREW, PLUG COVER TO BOT	2	MANUAL	
4	27	62860	GASKET	1	POWERHEAD TO EXHAUST EX	9
5		39622	SEAL, RUBBER	1	EXHAUST PLATE TO BOTTOM C	
6		72014A 2	PLATE ASSEMBLY, EXHAUST EX	1	SERIAL GROUP #1	
7		79614A 1	PLATE ASSEMBLY, EXHAUST EX	1	SERIAL GROUP #1	
7	23	71980	BUSHING, FLANGE EXHAUST F	1		
8	12	38453	WASHER, NYLON - WATER OUT	1		
9	26	38452	SEAL, RUBBER - WATER OUTL	1		9
10		38500	RETAINER, WATER OUTLET T	1	SERIAL GROUP #1	
11	10	74035	SCREW RETAINER TO EXHAU	1	SERIAL GROUP#1	
12		79799	HOUSING, WATER INLET TUBE	1	SERIAL GROUP #2	
13	27	79797	GASKET, HOUSING	1	SERIAL GROUP #2	9
14	10	79798	SCREW, HOUSING TO EXHAU	2	SERIAL GROUP #2	
15	27	38501	GASKET	1	EXHAUST PLATE TO DRIVE SH	9
16		37637	BOOT, FUEL CONNECTOR - BOT	1		
17		39616	BOOT, CONTROL CABLE - BOT	1		
18		39555A 1	COVER PLATE ASSEMBLY	1		
19		39556	PAD, SOUND - COVER PLATE	1		
20	10	69014	SCREW, COVER PLATE TO BOT	3		
21	87	69508A 5	STOP SWITCH ASSEMBLY	1	MANUAL	
22	11	69844	NUT, STOP SWITCH	1	MANUAL	
23		76176	LEVER, FRONT COVER	1		
24	17	26541	ROLL PIN, LEVER TO BOTTOM C	1		
25	24	76177	SPRING, FRONT COVER LEVER	1		