



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1		
2	12	36258	WASHER, FLYWHEEL NUT	1		
3	28	45554	KEY, FLYWHEEL DRIVE	1		
4	242	4764A16	FLYWHEEL ASSEMBLY (MANUAL)	1	SERIAL GROUP #1	
4	242	4764A15	FLYWHEEL ASSEMBLY (ELECTR)	1	SERIAL GROUP #1	
4	242	4764A26	FLYWHEEL ASSEMBLY (MANUAL)	1	SERIAL GROUP #2	
4	242	4764A25	FLYWHEEL ASSEMBLY (ELECTR)	1	SERIAL CROUP #2	
5	10	32417	SCREW, FLEXIBLE PLATE TO F	8		
6	50	65213	RATCHET, FLYWHEEL	1	MANUAL	
7	10	38398	SCREW, RATCHET TO FLYWHI	8	MANUAL	
8	13	20202	LOCKWASHER, RATCHET SCR	2	MANUAL	
9	398	5256	STATOR, IGNITION (MANUAL)	1		
9	398	5255	STATOR, ALTERNATOR	1	ELECTRIC	
10	10	56787	SCREW, STATOR TO UPPER EN	4		
11	13	26996	LOCKWASHER, STATOR SCREW	4		
12		61830	STATOR SUPPORT	1		
13	12	62133	WASHER, TRIGGER TO STATOR	1	UPPER	
14	13	61983	WASHER, WAVE - TRIGGER TO :	1	CENTER	
15	12	61982	WASHER, TRIGGER TO STATOR	1		
16	338	4731A 6	TRIGGER PLATE ASSEMBLY	1		
17	24	62095	SPRING, COMPRESSION	1		
18	17	62768	PIN, SPRING RETENTION	1		
19	54	54457	"J" CLIP, TRIGGER LEADS TO RL	1	MOUNT	
20	339	5748A 2	IGNITION COIL ASSEMBLY, COMI	2		
23	11	45076	NUT, COIL TERMINALS	4		
24	84	60466A 1	GROUND WIRE	2	COIL GROUND TO COIL COVER	
25		76254	COVER, IGNITION COIL	2		
26	10	69002	SCREW, COIL COVER TO COIL BI	2		
26	10	60194	SCREW, COIL COVER TO COIL BI	4		
27	84	63212A 2	LED ASSEMBLY, SPARK PLUG (F	2		
28	33	57451	SPARK PLUG (AC#V-R0FFM)	2	FOR CANADA AND BELGIUM, U:	
29	85	71006A 1	PROTECTOR ASSEMBLY, SPARK	2		
30	332	2854	BOOT, LEAD TO IGNITION COIL	2		
31	332	4911A 5	SWITCH BOX ASSEMBLY, COMPI	1		
32	54	54457	"J" CLIP, SWITCH BOX LEADS	2		
33	10	69067	SCREW, SWITCH BOX AND "J" C	2		
34	10	45218	SCREW, TERMINAL BLOCK AND	6		
35	86	66754	TERMINAL BLOCK, SWITCH BOX	1		
36	10	20646	SCREW, TERMINAL BLOCK ATT	2		
37	11	20190	NUT, TERMINAL BLOCK ATTACH	2		
38		61980	STA STRAP, STATOR LEADS	1		