



Parts List							
Ref	Class	Part	Description	Qty	Comment	Footnote	
		1643	6459A10	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT): SERIAL GROU	
		1643	6459A11	GEAR HOUSING ASSEMBLY, CO	1	(LONG SHAFT): SERIAL GROU	
		1643	7406A14	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT): SERIAL GROU	
		1643	7406A15	GEAR HOUSING ASSEMBLY, CO	1	(LONG SHAFT): SERIAL GROU	
1	1643	6459A 3	GEAR HOUSING ASSEMBLY	1	SERIAL GROUP #1		
1	1643	7406A16	GEAR HOUSING ASSEMBLY	1	SERIAL GROUP #2		
1A	22	85822A 1	CONNECTOR ASSEMBLY, SP	1	SERIAL GROUP #2		
2	17	46912	PIN, DOWEL - GEAR HOUSIN	2			
3	16	33778	STUD, WATER PUMP BODY/	3	(2 5/8")		
4	16	57933	STUD, GEAR HOUSING TO D	2			
5	31	62091	BEARING, ROLLER - DRIVE S	1			
6		63850	SCREEN, WATER INTAKE - S	1			
6		63851	SCREEN, WATER INTAKE - P	1			
7	10	36070	SCREW	1	WATER INTAKE SCREEN TO GE		
8	11	45812	NUT, WATER INTAKE SCREE	1			
9		38071	PLATE, SUPPORT - EXHAUST	1			
10		37721	SEAL, EXHAUST TUBE	1		9	
11	43	55607	GEAR, PINION - DRIVE SHAFT	1			
12	11	55910	NUT, PINION GEAR TO DRIVE	1			
13	27	77417	GASKET, WATER PUMP BASE	1		9	
14	25	20266	"O" RING, WATER PUMP BASE	1		9	
15	46	77177A 1	WATER PUMP BASE ASSEMBL	1			
16	26	79831	OIL SEAL, WATER PUMP BAS	1			
17	26	23300	OIL SEAL, WATER PUMP BAS	1			
18	17	35973	DOWEL PIN	2	WATER PUMP BASE TO WATER		
19	27	32769	GASKET, LOWER	1	WATER PUMP BASE TO FACE F	9	
20		54705	PLATE, FACE	1	WATER PUMP BASE TO WATER		
21	27	32770	GASKET, UPPER	1	FACE PLATE TO WATER PUMP	9	
22	47	65959	IMPELLER, WATER PUMP	1			
23	28	56662	KEY, IMPELLER DRIVE	1			
24	46	77822A 1	WATER PUMP BODY ASSEMBL	1			
25		48753	INSERT, WATER PUMP BOD	1			
26	12	29245	WASHER, WATER PUMP BOD	3			
27	11	35888	NUT, WATER PUMP BODY AN	3			
28	26	38452	SEAL, RUBBER - WATER INLE	1		9	
29	12	38453	WASHER, NYLON - WATER PU	1			
30	25	20273	RING, RUBBER - CENTRIFUGA	1		9	
31	10	79953	SCREW, GREASE FILLER	1			
31	22	67892	SCREW, DRAIN (MAGNETIC)	1			
32	12	20260	WASHER, GREASE FILLER AN	2			
35		76062A 1	SHAFT ASSEMBLY, SHIF	1			