



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42819A 2	PLATE ASSEMBLY, EXHAUST EX	1		
2	23	27132	BUSHING, EXHAUST EXTENSIO	1		
3	12	38453	WASHER, NYLON - WATER INL	1		
4	26	38452	SEAL, RUBBER - WATER TUBE	1		3
5		79799	HOUSING, WATER INLET TUBE	1		
6	27	79797	GASKET, HOUSING	1		3
7	10	79798	SCREW, HOUSING TO EXHAUS	2		
8	27	79650	GASKET, POWERHEAD	1		3
9		76632A 3	SHIFT SHAFT ASSEMBLY, UPPE	1		
9		76632A 4	SHIFT SHAFT ASSEMBLY, UPPE	1		
10		60572	BARREL, NYLON - UPPER SHIF	1		
11		74739A 3	ACTUATOR ASSEMBLY, SHIF	1		
12	24	37934	SPRING, SHIFT CABLE	1		
13	10	38069	SCREW, SPRING TO ACTUATO	1		
14		37932	BEARING, NYLON - SHIF	1		
15	10	36137	SCREW	1	BEARING TO SHIFT CONTROL /	
16	13	21272	LOCKWASHER, BEARING SCRE	1		
17		37935	RAIL, SHIFT CONTROL BEARIN	1		
18	10	69028	SCREW, RAIL TO EXHAUST MAN	1		
19	13	26992	LOCKWASHER, RAIL SCREW	1		
20		59037A 2	LEVER, THROTTLE AND SHIF	1		
21	17	23928	PIN, ROLL - QUICK DISCONNECT	2		
22	24	38005	SPRING, QUICK DISCONNECT LE	2		
23	23	37927	BUSHING NYLON - QUICK DISCO	2		
24		37926	RETAINER, NYLON BEARING	1		
25	10	37923	SCREW, BEARING RETAINER	1		
26	27	38501	GASKET, EXHAUST EXTENSION	1		3
27		38156	SEAL, RUBBER - EXHAUST EXTE	1		
28		99136	STRIP, RUBBER SEAL	1		
29	10	37571	SCREW, RETAINING STRIP (1/2	6		
-	27	72486A32	GASKET SET			