



GEAR HOUSING (DRIVE SHAFT)

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	7406A34	GEAR HOUSING ASSEMBLY (SH)	1		
-	1643	7406A35	GEAR HOUSING ASSEMBLY (LOP)	1		
-	1643	7406A43	GEAR HOUSING ASSEMBLY (X-L)	1		
-	1643	7406A38	GEAR HOUSING ASSEMBLY (SH)	1		
-	1643	7406A39	GEAR HOUSING ASSEMBLY (LOP)	1		
-	1643	7406A43	GEAR HOUSING ASSEMBLY (X-L)	1		
1	1643	7406A16	GEAR HOUSING ASSEMBLY ME	1		
1	1643	7406A41	GEAR HOUSING ASSEMBLY M	1		
2	22	85822A	CONNECTOR ASSEMBLY, SP	1		
3	17	85500	DOWEL PIN - GEAR HOUSING	2		
4	16	33778	STUD, WATER PUMP/BASE (3		
5	16	57933	STUD, GEAR HOUSING	2		
5	16	96126	STUD, GEAR HOUSING (X-LO)	2		
6	31	62091	ROLLER BEARING - DRIVE SH	1		
7		72849A	SCREEN ASSEMBLY, WATER	1		
8	10	36070	SCREW	1	WATER INTAKE SCREEN TO GE	
9	11	45812	NUT, WATER INTAKE SCREE	1		
10		92815	PLATE, SUPPORT - EXHAUST	1		
11		37721	SEAL, EXHAUST TUBE	1		
12	43	98097	PINION GEAR - DRIVE SHAFT	1		6
13	11	55910	NUT, PINION GEAR TO DRIVE :	1		
14	27	77417	GASKET, WATER PUMP BASE	1		3,6,7
15	25	26722	"O" RING	1		3,6,7
16	46	77177A	WATER PUMP BASE	1		6
17	26	79831	OIL SEAL	1		6,7
18	26	90562	OIL SEAL	1		6,7
19	17	35973	DOWL PIN	2		6
20	27	32769	GASKET, LOWER	1		3,6,7
21		54705	FACE PLATE	1		6
22	27	32770	GASKET, UPPER	1		3,6,7
23	47	89983	IMPELLER	1		6
24	28	56662	KEY, IMPELLER DRIVE	1		6
25	46	77822A	WATER PUMP BODY	1		6
26		48753	INSERT	1		6
27	26	38452	SEAL, RUBBER	1		3,6,7
28	12	38453	WASHER, NYLON	1		6,7
29	12	29245	WASHER, WATER PUMP BODY	3		
30	11	35888	NUT, WATER PUMP BODY ANC	3		
31	25	20273	RING, RUBBER	1	CENTRIFUGAL SLINGER (DRIVE	3,6,7
32		78654A	SEAT ASSEMBLY, DRIVE SHAF	1		
33		86304	SEAL SPRING, DRIVE SHAF	1		7