



7475

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		42819A 2	PLATE ASSEMBLY, Exhaust Exter	1	
2	23	27132	BUSHING, Exhaust Extension Ple	1	
3	12	38453	WASHER, Nylon - Water Inlet Tu	1	
4	26	38452	SEAL, Rubber - Water Tube	1	17
5		79799	HOUSING, Water Inlet Tube Sea	1	
6	27	79797 1	GASKET, Housing	1	17
7	10	79798	SCREW, Housing to Exhaust Plal	2	
8	27	79650 1	GASKET, Powerhead	1	17
9		76632A 3	SHIFT SHAFT ASSEMBLY, Upper	1	
9		76632A 4	SHIFT SHAFT ASSEMBLY, Upper	1	
10		60572	BARREL, Nylon - Upper Shift Shaft	1	
11		74739A 3	ACTUATOR ASSEMBLY, Shift Cor	1	
12	24	37934	SPRING, Shift Cable	1	
13	10	38069	SCREW, Spring to Actuator	1	
14		37932	BEARING, Nylon - Shift Control Act	1	
15	10	36137	SCREW, (.25-28 x 1), Bearing to St	1	
16	13	21272	LOCKWASHER, (1/4 Inch), Bearin	1	
17		37935	RAIL, Shift Control Bearing	1	
18	10	69028	SCREW, (.250-28 x .750), Rail to E	1	
19	13	26392	LOCKWASHER, (.250), Rail Screw	1	
20		59037A 2	LEVER, Throttle and Shift Cables	1	
21	17	23928	PIN, Roll - Quick Disconnect Lever	2	
22	24	38005	SPRING, Quick Disconnect Lever	2	
23	23	37927	BUSHING NYLON, Nylon - Quick C	2	
24		37926	RETAINER, Nylon Bearing	1	
25	10	37923	SCREW, (0.25-28 X 1.25), Bearing	1	
26	27	38501 1	GASKET, Exhaust Extension Plate	1	17
27		38156	SEAL, Rubber - Exhaust Extension	1	
28		99136	STRIP, Rubber Seal	1	
29	10	37571	SCREW, (.190-32 X .50), Retaining	6	
--	27	85491A87	GASKET SET	--	