



7467

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A	RECTIFIER	1		
2	11	45076	NUT, (#10-32 Brass), Rectifier Term	3		
3	10	20411	SCREW, (.190-24 x .62), Rectifier t	2		
4	50	73521	STARTER MOTOR	1		
5		57247	STOP, Rubber - Starter Motor	2		
6		56703	COLLAR, Rubber - Starter Motor M	2		
7		13473	FUSE HOLDER	1		
8	84	93389A	WIRE, Starter Motor/Soleniod (Yell)	1		
9	11	64015	NUT, (.250-20), Wire to Starter Mot	1		
10	84	93388A	WIRE, Starter Motor/Bracket (Blac)	1		
11	10	69035	SCREW AND LOCKWASHER, (.25	1		
12	89	96158	STARTER SOLENOID	1		
13	11	26419	NUT, (#8-32), Soleniod Terminal	2		
14	11	94330	NUT, (.250-20), Solenoid Terminal	2		
15	10	41508	SCREW, (.250-20 x .50), Soleniod t	2		
16	13	26992	LOCKWASHER, (.250), Starter Solk	2		
17	85	97861	INSULATOR, Starter Solenoid	1		
18	84	96277A	WIRING HARNESS	1		
19	88	79091	FUSE, (20 Amp)	1		
20	84	95084A	CABLE ASSEMBLY, Fuse	1		
21		88751	CLAMP, Wiring Harness	1		
22	24	28357	SPRING, Wiring Harness	1		
23	10	23702	SCREW, (.190-32 x 1.12), Wiring H	1		
24	12	72761	WASHER, Wiring Harness Clamp S	1		
25	84	88439A	BATTERY CABLE, Positive	1		
25	84	88439A	BATTERY CABLE, Negative	1		