



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	19	45907	PLUG, FLYWHEEL	1		
2	11	22339	NUT, FLYWHEEL	1		
3	12	68229	WASHER, FLYWHEEL NUT	1		
4	248	5977A32	FLYWHEEL ASSEMBLY (MANUAL)	1	UNITED STATES 6275322 AND I	
4	248	5977A23	FLYWHEEL ASSEMBLY (ELECTR)	1	UNITED STATES 6275322 AND I	
4	248	8722A11	FLYWHEEL ASSEMBLY(MANUAL)	1	UNITED STATES 6275323 AND I	
4	248	8722A 9	FLYWHEEL ASSEMBLY (ELECTR)	1	UNITED STATES 6275323 AND I	
5	10	32417	SCREW, FLEXINLE PLATE TO F	8		
6	50	88755	RATCHET, FLYWHEEL - MANU-	1		
7	10	68997	SCREW, RATCHET TO FLYWHI	8		
8		76314A 3	STATOR (MANUAL)	1		
8	398	5454A25	STATOR (ELECTRIC)	1		
9	10	75840	SCREW, STATOR TO UPPER EN	2		
9	10	76290	SCREW, STATOR TO UPPER EN	2		
10		96452A 1	TRIGGER ASSEMBLY	1		
11	54	61001	"J" CLIP, TRIGGER LADS TO CAF	1		
12		61990	STA-STRAP, TRIGGER LEADS	1		
13	84	88721A 1	HARNES, SWITCH BOX TO IGN	1		
14	339	7370A13	IGNITION COIL ASSEMBLY	4		
15	11	45076	NUT, IGNITION COIL TERMINALS	8		
16	84	60466A19	GROUND WIRE, COIL TO SWITC	4		
17		87554	COVER, IGNITION COIL	1		
18	10	76502	SCREW, COIL COVER (10-32 X 1-	5	UNITED STATES 5796395 AND I	
18	10	88856	SCREW, COIL COVER (10-32 X 2"	5	UNITED STATES 5796396 AND I	
19	12	30164	WASHER, COIL COVER SCREW	5	UNITED STATES 5796396 AND I	
20	84	99215A25	LEAD ASSEMBLY, SPARK PLUG	4		
21	85	63709A 1	PROTECTOR ASSEMBLY	4		
22	332	2854	BOOT, IGNITION COIL	4		
23	33	97182	SPARK PLUG (NGK #BUHW-2)	4	BELGIUM AND CANADA USE ?3	
24	332	5772A 2	SWITCH BOX ASSEMBLY	1		
25	10	20619	SCREW	4	SWITCH BOX AND "J" CLIP TO F	
26	54	64235 1	"J" CLIP, SWITCH BOX LEADS	1		
27	11	45076	NUT, SWITCH BOX TERMINALS	13		
28		88322	PLATE, SWITCH BOX	1		
29	10	54615	SCREW, SWITCH BOX PLATE TC	2		