



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		92975A 6	HYDRAULIC PUMP ASSEMBLY	1	SEE "HYDRAULIC PUMP ASSEM	
2	25	48171	"O" RING, MANIFOLD PLATE	4		
3	10	79953	SCREW, FILLER - HYDRAULIC	1		
4	12	20260	WASHER, SEALING - FILLER S	1		
5	10	62269	SCREW, VENT - HYDRAULIC PI	1		
6		45336	PLATE, MANIFOLD	1		
7		45197A 2	CONTROL VALVE ASSEMBLY	1		
--	25	48171	"O" RING, MANIFOLD PLATE (S	4		
8	25	45254	"O" RING, CONTROL VALVE (3-	1		
9	25	48171	"O" RING, CONROL VALVE (1/2	1		
10	25	45253	"O" RING, CONTROL VALVE 5/	2		
11	10	56500	SCREW	4	VALVE AND MANIFOLD PLATE 1	
12	22	46008	PLUG, CONTROL VALVE (1/2-20"	2		
13	84	79147A 3	CONNECOTR AND HARNESS	1		
14	88	79091	FUSE (20 AMP)	1		
15	84	95084A 3	WIRE ASSEMBLY, FUSE	1		
16		45377	BRACKET, MOUNTING	2		
17	10	35386	SCREW	4	MOUNTING BRACKET TO HYDF	
18	13	39107	LOCKWASHER, MOUNTING BRA	4		
19	11	21908	NUT, MOUNTING BRACKET SCR	4		
20	10	31830	BOLT, HYDRAULIC PUMP TO BO.	2		
21	11	99405	NUT, HYDRAULIC PUMP BOLT	2		
22	10	94279	BRACKET, MOUNTING - STARTE	1		
23	10	48063	SCREW	2	MOUNTING BRACKET TO HYDF	
24	11	29488	NUT	1	MOUNTING BRACKET TO HYDF	
25	89	96158	STARTER SOLENOID	2		
26	13	26995	LOCKWASHER, SOLENOID TERN	4		
27	11	26419	NUT, SOLENOID TERMINAL (8-3	4		
28	13	26992	LOCKWASHER, SOLENOID TERN	4		
29	11	94330	NUT, SOLENOID TERMINAL (1/4	4		
30	85	96535	BOOT, RUBBER - STARTER SOLI	4		
31	10	41508	SCREW	4	STARTER SOLENOID TO MOUN	
32		94275	LINK, SOLENOID TO SOLENOID	1		
33	84	79139A13	BATTERY LEAD (POSITIVE)	1		
33	84	79138A 1	BATTERY LEAD (NEGATIVE)	1		
34	88	79149	CIRCUIT BREAKER (20 AMP) - EA	1		
35	10	69014	SCREW, CIRCUIT BREAKER - EA	2		
36	11	45076	NUT	2	CIRCUIT BREAKER TERMINAL (
37	84	87379A 5	WIRE	1	SOLENOID TO CIRCUIT BREAKE	
38	88	79023A90	FUSE ASSEMBLY (90 AMP)	1		
39	12	96457	WASHER, FUSE TERMINAL	1		