



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1643	7406A34	GEAR HOUSING ASSEMBLY (SHI	1	
-	1643	7406A35	GEAR HOUSING ASSEMBLY (LOP	1	
-	1643	7406A43	GEAR HOUSING ASSEMBLY (X-L)	1	
-	1643	7406A38	GEAR HOUSING ASSEMBLY (SHI	1	
-	1643	7406A39	GEAR HOUSING ASSEMBLY (LOP	1	
-	1643	7406A43	GEAR HOUSING ASSEMBLY (X-L)	1	
1	1643	7406A16	GEAR HOUSING ASSEMBLY ME	1	
1	1643	7406A41	GEAR HOUSING ASSEMBLY MA	1	
51		76039	SHIFT CAM	1	
52	15	38374A	SHIM, BEARING CUP TO GEAR	AR	
53	31	38356A	TAPERED ROLLER BEARING A	1	
54	43	55608A	FORWARD GEAR	1	
55	31	21739	ROLLER BEARING - FORWA	1	
56		38441	CAM FOLLOWER	1	
57		20843	SLIDE, CROSS PIN	1	
58	24	38114	SPRING, RETAINING - CROSS	1	
59	52	92911	RATCHET, SLIDING CLUTCH	1	
60	17	38113	CROSS PIN - RATCHET TO PRO	1	
61	24	39845	SPRING, COMPRESSION - CAM	1	
62	44	75365	PROPELLER SHAFT	1	
63	43	79158	REVERSE GEAR	1	
64	12	32004	WASHER, THRUST - REVERSE	1	
65	30	20839	BALL BEARING - REVERSE GE	1	
66	25	31986	"O" RING, BEARING CARRIER	1	3
67		69386A	BEARING CARRIER ASSEMBLY	1	
68	31	21700	ROLLER BEARING - BEARING	1	
69	26	69188	OIL SEAL, BEARING CARRIER	1	
70	26	69189	OIL SEAL, BEARING CARRIER	1	
71	28	30281	KEY, LOCATING - BEARING CA	1	
72	14	53012	TAB WASHER, GEAR HOUSING	1	
73	11	87763	NUT, GEAR HOUSING	1	
74		31640A	TRIM TAB ASSEMBLY, GEAR H	1	
75	10	66024	SCREW, TRIM TAB TO GEAR H	1	
76	12	45175	WASHER, DRIVE SHAFT HOUSIN	1	
77	11	34863	NUT, DRIVE SHAFT HOUSING S	1	
78	12	65791	WASHER, HOUSING TO STUD (7	1	
79	11	34933	NUT, STUD (7/16")	1	
80		73345A	THRUST HUB, FRONT	1	
81	14	76281	TAB WASHER, PROPELLER NUT	1	
82	11	69578A	PROPELLER NUT	1	
		72486A2	GASKET SET		