



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2116	7715A 1	BOTTOM COWL ASSEMBLY (MEF)	1		
1	2116	7715A 2	BOTTOM COWL ASSEMBLY (DAF)	1		
1	2116	7715A 3	BOTTOM COWL ASSEMBLY (LIG)	1		
2		88926	COVER, BOTTOM COWL - ELEC	1		
3	10	45862	SCREW, PLUG TO BOTTOM C	2		
2A		91991	PLUG, BOTTOM COWL - MANU	1		
3A	10	28636	SCREW, PLUG TO BOTTOM CC	2		
4	16	68169	STUD, BOTTOM COWL	4		
5	11	35888	NUT, BOTTOM COWL STUD	4		
6	22	78279	ELBOW, TELL TALE HOSE - CYLI	1		
7	32	75680 54	HOSE, TELL TALE HOSE TO BOT	1		
8		69791	NOZZLE, TELL TALE HOSE TO B	1		
9	23	90882	SLEEVE, TELL TALE NOZZLE	1		
10	54	68424	CLAMP, TELL TALE NOZZLE	2		
11		66849	CLAMP, NOZZLE - TELL TALE	1		
12	10	48408	SCREW, NOZZLE CLAMP TO BO	1		
13		72020 1	BRACKET, REAR SUPPORT	1		
14	25	52723	GROMMET, REAR SUPPORT BR	1		
15		60577	MOUNT, RUBBER - REAR SUPPC	2		
16	12	21631	WASHER, RUBBER MOUNT	AR		
17	11	29598	NUT, RUBBER MOUNT	2		
18		72466	DRIP TRAY	1		
19	10	48409	SCREW, DRIP TRAY TO BOTTO	3		
20		37695	BOOT, CONTROL CABLE	1		
21		37637	BOOT, FUEL CONNECTOR	1		
22	87	69508A31	STOP SWITCH (MANUAL PUSH E	1		
23	87	99525A 1	COVER ASSEMBLY	1	STOP SWITCH - MANUAL PUSH	
24	11	69844	NUT	1	STOP SWITCH - MANUAL PUSH	
25	84	62190A 8	WIRE ASSEMBLY, STOP SWITCH	1	MANUAL PUSH BUTTOM SWITC	
26		88238A 4	GROUND STRAP (3-3/8")	2		
27	10	62568	SCREW, GROUND STRAP	2		
28		99150A 5	BRACKET ASSEMBLY, FRONT SL	1		
29		31014	MOUNT, RUBBER - FRONT SUPP	2		
30	13	26992	LOCKWASHER, RUBBER MOUNI	2		
31	11	29598	NUT, RUBBER MOUNT	2		
32	10	37562	SCREW	2	FRONT SUPPORT BRACKET TO	
33		58124A20	SWITCH ASSEMBLY, MERCURY	1		
33	87	33386A 3	SWITCH ASSEMBLY, MERCURY	1		
34	10	69235	SCREW, SWITCH TO FRONT BR	1		
35	17	36242	ROLL PIN, MERCURY SWITCH	2		
36		46915	TERMINAL BLOCK	1		