



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	863	8358A 4	CYLINDER BLOCK/CRANKCASE	1		
2		72038	BRACKET, STARTER MOTOR	1		
3	10	73279	SCREW, BRACKET TO CRANKCASE	2		
4	13	26993	LOCKWASHER, BRACKET SCR	4		
5		76867	COVER, STARTER MOTOR (LOW SPEED)	1		
6	10	73279	SCREW, COVER TO CRANKCASE	2		
7		46933A 7	CABLE ASSEMBLY, GROUND	2		
8	17	20032	DOWEL PIN, CYLINDER BLOCK TO CRANKCASE	2		
9	16	68164	STUD, CARBURETOR (1-1/4")	4		
10	16	68165	STUD	2	CRANKCASE TO DRIVE SHAFT	
11	17	20033	DOWEL PIN, CRANKCASE TO CYLINDER BLOCK	2		
12	16	87901	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2		
13	16	68166	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2		
14	16	68167	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2		
15	10	55511	SCREW, CRANKCASE TO CYLINDER BLOCK	11		
15	10	31984	SCREW, CRANKCASE TO CYLINDER BLOCK	5		
15	10	73275	SCREW, CRANKCASE TO CYLINDER BLOCK	2		
16	12	70132	WASHER, CRANKCASE SCREW	18		
17	10	20359	SCREW, CENTER MAIN BEARING	1		
17	10	98260	SCREW, MAIN BEARING LOCKING	2		
18	14	20091	TAB WASHER, CENTER BEARING	3		
19	32	99127109	TUBE, BALANCE - MAIN BEARING	1		
20	22	99664	ELBOW, BALANCE TUBE TO CYLINDER BLOCK	2		
21	22	65857	CONNECTOR, BLEED HOSE (UPFLOW)	1		
22	32	99387 79	HOSE, CYLINDER BLEED (11")	1		
23	22	42867	CHECK VALVE, BLEED HOSE (LOW SPEED)	1		
24		99156	INDICATOR, TIMING - ELECTRIC	1		
25	10	39349	SCREW	1	INDICATOR TO CRANKCASE (3/4")	
26	13	26993	LOCKWASHER, INDICATOR SCREW	1		