



| Parts List |       |          |                              |     |                             |          |
|------------|-------|----------|------------------------------|-----|-----------------------------|----------|
| Ref        | Class | Part     | Description                  | Qty | Comment                     | Footnote |
| 1          |       | 62351A 1 | RECTIFIER                    | 1   |                             |          |
| 2          | 11    | 45076    | NUT, RECTIFIER TERMINAL      | 3   |                             |          |
| 3          | 10    | 20411    | SCREW, RECTIFIER TO SWITCH   | 2   |                             |          |
| 4          | 50    | 73521    | STARTER MOTOR                | 1   |                             |          |
| 5          |       | 57247    | STOP, RUBBER - STARTER MOT   | 1   |                             |          |
| 6          |       | 56703    | COLLAR, RUBBER - STARTER MI  | 2   |                             |          |
| 7          |       | 56774    | SPACER, COLLAR TO BRACKET    | AR  |                             |          |
| 8          | 84    | 93389A 1 | WIRE, STARTER MOTOR/SOLEN    | 1   |                             |          |
| 9          | 11    | 64015    | NUT, WIRE TO STARTER MOTOI   | 1   |                             |          |
| 10         | 84    | 93388A 2 | WIRE, STARTER MOTOR/BRACK    | 1   |                             |          |
| 11         | 10    | 69035    | SCREW, WIRE TO STARTER MO    | 1   |                             |          |
| 12         | 89    | 76545    | STARTER SOLENOID             | 1   | UNITED STATES 6146848 AND I |          |
| 13         | 11    | 45076    | NUT, SOLENOID TERMINAL (#10  | 2   | UNITED STATES 6146848 AND I |          |
| 14         | 11    | 21908    | NUT, SOLENOID TERMINAL (5/11 | 2   | UNITED STATES 6146848 AND I |          |
| 12         | 89    | 96158    | STARTER SOLENOID             | 1   | UNITED STATES 6146849 AND I |          |
| 13         | 11    | 26419    | NUT, SOLENOID TERMINAL (#8-  | 2   | UNITED STATES 6146849 AND I |          |
| 14         | 11    | 94330    | NUT, SOLENOID TERMINAL (1/4- | 2   | UNITED STATES 6146849 AND I |          |
| 15         | 10    | 98253    | SCREW, SOLENOID TO SUPPOR    | 2   |                             |          |
| 16         | 13    | 26992    | WASHER, STARTER SOLENOID     | 2   |                             |          |
| 17         | 85    | 97861    | INSULATOR, STARTER SOLENO    | 1   |                             |          |
| 18         | 84    | 96277A 2 | WIRING HARNESS               | 1   |                             |          |
| 19         | 99    | 79091    | FUSE                         | 1   |                             |          |
| 20         | 84    | 95084A 2 | WIRE ASSEMBLY, FUSE          | 1   |                             |          |
| 21         |       | 88751    | CLAMP, WIRING HARNESS        | 1   |                             |          |
| 22         | 24    | 28357    | SPRING, WIRING HARNESS       | 1   |                             |          |
| 23         | 10    | 23702    | SCREW, WIRING HARNESS CLAI   | 1   |                             |          |
| 24         | 12    | 72761    | WASHER, WIRING HARNESS CL    | 1   |                             |          |
| 25         | 84    | 88439A 3 | BATTERY CABLE (POSITIVE)     | 1   |                             |          |
| 25         | 84    | 88439A 4 | BATTERY CABLE (NEGATIVE)     | 1   |                             |          |