



| Parts List |       |          |                               |     |                            |          |
|------------|-------|----------|-------------------------------|-----|----------------------------|----------|
| Ref        | Class | Part     | Description                   | Qty | Comment                    | Footnote |
| 1          |       | 92975A 6 | HYDRAULIC PUMP ASSEMBLY       | 1   | SEE "HYDRAULIC PUMP ASSEM  |          |
| 2          | 25    | 48171    | "O" RING, MANIFOLD PLATE      | 4   |                            |          |
| 3          | 10    | 79953    | SCREW, FILLER - HYDRAULIC I   | 1   |                            |          |
| 4          | 12    | 20260    | WASHER, SEALING - FILLER SI   | 1   |                            |          |
| 5          | 10    | 62269    | SCREW, VENT - HYDRAULIC PI    | 1   |                            |          |
| 6          |       | 45336    | PLATE, MANIFOLD               | 1   |                            |          |
| 7          |       | 45197A 2 | CONTROL VALVE ASSEMBLY        | 1   |                            |          |
| --         | 25    | 48171    | "O" RING, MANIFOLD PLATE (S   | 4   |                            |          |
| 8          | 25    | 45254    | "O" RING, CONTROL VALVE (3-   | 1   |                            |          |
| 9          | 25    | 48171    | "O" RING, CONROL VALVE (1/2   | 1   |                            |          |
| 10         | 25    | 45253    | "O" RING, CONTROL VALVE 5/    | 2   |                            |          |
| 11         | 10    | 56500    | SCREW                         | 4   | VALVE AND MANIFOLD PLATE 1 |          |
| 12         | 22    | 46008    | PLUG, CONTROL VALVE (1/2-20"  | 2   |                            |          |
| 13         | 84    | 79147A 3 | CONNECOTR AND HARNESS         | 1   |                            |          |
| 14         | 88    | 79091    | FUSE (20 AMP)                 | 1   |                            |          |
| 15         | 84    | 95084A 3 | WIRE ASSEMBLY, FUSE           | 1   |                            |          |
| 16         |       | 45377    | BRACKET, MOUNTING             | 2   |                            |          |
| 17         | 10    | 35386    | SCREW                         | 4   | MOUNTING BRACKET TO HYDF   |          |
| 18         | 13    | 39107    | LOCKWASHER, MOUNTING BRA      | 4   |                            |          |
| 19         | 11    | 21908    | NUT, MOUNTING BRACKET SCR     | 4   |                            |          |
| 20         | 10    | 31830    | BOLT, HYDRAULIC PUMP TO BO.   | 2   |                            |          |
| 21         | 11    | 99405    | NUT, HYDRAULIC PUMP BOLT      | 2   |                            |          |
| 22         |       | 94279    | BRACKET, MOUNTING - STARTE    | 1   |                            |          |
| 23         | 10    | 48063    | SCREW                         | 2   | MOUNTING BRACKET TO HYDF   |          |
| 24         | 11    | 29488    | NUT                           | 1   | MOUNTING BRACKET TO HYDF   |          |
| 25         | 89    | 96158    | STARTER SOLENOID              | 2   |                            |          |
| 26         | 13    | 26995    | LOCKWASHER, SOLENOID TERN     | 4   |                            |          |
| 27         | 11    | 26419    | NUT, SOLENOID TERMINAL (8-3   | 4   |                            |          |
| 28         | 13    | 26992    | LOCKWASHER, SOLENOID TERN     | 4   |                            |          |
| 29         | 11    | 94330    | NUT, SOLENOID TERMINAL (1/4   | 4   |                            |          |
| 30         | 85    | 96535    | BOOT, RUBBER - STARTER SOLI   | 4   |                            |          |
| 31         | 10    | 41508    | SCREW                         | 4   | STARTER SOLENOID TO MOUN   |          |
| 32         |       | 94275    | LINK, SOLENOID TO SOLENOID    | 1   |                            |          |
| 33         | 84    | 79139A13 | BATTERY LEAD (POSITIVE)       | 1   |                            |          |
| 33         | 84    | 79138A 1 | BATTERY LEAD (NEGATIVE)       | 1   |                            |          |
| 34         | 88    | 79149    | CIRCUIT BREAKER (20 AMP) - EA | 1   |                            |          |
| 35         | 10    | 69014    | SCREW, CIRCUIT BREAKER - EA   | 2   |                            |          |
| 36         | 11    | 45076    | NUT                           | 2   | CIRCUIT BREAKER TERMINAL ( |          |
| 37         | 84    | 87379A 5 | WIRE                          | 1   | SOLENOID TO CIRCUIT BREAKE |          |
| 38         | 88    | 79023A90 | FUSE ASSEMBLY (90 AMP)        | 1   |                            |          |
| 39         | 12    | 96457    | WASHER, FUSE TERMINAL         | 1   |                            |          |