



| Parts List | | | | | | |
|------------|-------|----------|------------------------|-----|----------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 50 | 822462 | STARTER MOTOR | 1 | | |
| 2 | 10 | 96566 | 1 THRU BOLT | 1 | | |
| 3 | | 90643 | DRIVE KIT | 1 | | |
| 4 | | 68575 | DRIVE ASSEMBLY | 1 | | |
| 5 | | 823639 | DRIVE CAP | 1 | | |
| 6 | | 96565 | 1 ARMATURE | 1 | | |
| 7 | | 811901 | 1 COMMUTATOR CAP | 1 | | |
| 8 | | 75384 | BRUSH & SPRING KIT | 1 | | |
| 9 | | 61787 | BRUSH HOLDER | 1 | | |
| 10 | | F15158 | SCREW | 2 | | |
| 11 | 13 | 26992 | LOCKWASHER | 1 | | |
| 12 | 11 | 64015 | NUT (1/4-20) | 1 | | |
| 13 | 84 | 88439A | 9 BATTERY CABLE (5/16) | 1 | POSITIVE | |
| 14 | 10 | 40011153 | SCREW (M8 X 45) | 3 | | |
| 15 | | NSS | DECAL-WARNING | 1 | | 7 |
| 16 | | 823989 | BRACKET-OIL TANK | 1 | | 3 |