



7475

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42819A 2	PLATE ASSEMBLY, Exhaust Exter	1		
2	23	27132	BUSHING, Exhaust Extension Pl	1		
3	12	38453	WASHER, Nylon - Water Inlet Tu	1		
4	26	38452	SEAL, Rubber - Water Tube	1		17
5		79799	HOUSING, Water Inlet Tube Sea	1		
6	27	79797 1	GASKET, Housing	1		17
7	10	79798	SCREW, Housing to Exhaust Pl	2		
8	27	79650 1	GASKET, Powerhead	1		17
9		76632A 3	SHIFT SHAFT ASSEMBLY, Upper	1		
9		76632A 4	SHIFT SHAFT ASSEMBLY, Upper	1		
10		60572	BARREL, Nylon - Upper Shift Shaft	1		
11		74739A 3	ACTUATOR ASSEMBLY, Shift Cor	1		
12	24	37934	SPRING, Shift Cable	1		
13	10	38069	SCREW, Spring to Actuator	1		
14		37932	BEARING, Nylon - Shift Control Act	1		
15	10	36137	SCREW, (.25-28 x 1), Bearing to St	1		
16	13	21272	LOCKWASHER, (1/4 Inch), Bearin	1		
17		37935	RAIL, Shift Control Bearing	1		
18	10	69028	SCREW, (.250-28 x .750), Rail to E	1		
19	13	26392	LOCKWASHER, (.250), Rail Screw	1		
20		59037A 2	LEVER, Throttle and Shift Cables	1		
21	17	23928	PIN, Roll - Quick Disconnect Lever	2		
22	24	38005	SPRING, Quick Disconnect Lever	2		
23	23	37927	BUSHING NYLON, Nylon - Quick C	2		
24		37926	RETAINER, Nylon Bearing	1		
25	10	37923	SCREW, (0.25-28 X 1.25), Bearing	1		
26	27	38501 1	GASKET, Exhaust Extension Plate	1		17
27		38156	SEAL, Rubber - Exhaust Extension	1		
28		99136	STRIP, Rubber Seal	1		
29	10	37571	SCREW, (.190-32 X .50), Retainin	6		
--	27	85491A87	GASKET SET	--		