



748A

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		92975A 6	HYDRUALIC PUMP ASSEMBLY	1		21
2	25	48171	O RING, Manifold Plate	4		
3	10	79953	SCREW, Filler - Hydraulic Pump	1		
4	12	19183	WASHER, Sealing Filler Screw	1		
5	10	62269	SCREW, Vent - Hydraulic Pump	1		
6		45336	PLATE, Manifold	1		
7		45197A 2	CONTROL VALVE ASSEMBLY	1		
--	25	48171	O RING, Manifold Plate (See Ref)	4		
8	25	45254	O RING, Control Valve	1	(0.75 Inch O.D.)	
9	25	48171	O RING, Control Valve	1	(0.50 Inch O.D.)	
10	25	45253	O RING, Control Valve	2	(0.625 Inch O.D.)	
11	10	56500	SCREW, Valve and Manifold Plate	4	(1.25 Inch)	
12	22	46008	PLUG, Control Valve	2	(0.50-20 Inch)	
13	84	79147A 3	HARNES ASSEMBLY	1		
14	88	79091	FUSE, (20 Amp)	1		
15	84	95084A 3	WIRE ASSEMBLY, Fuse	1		
16		45377T	BRACKET, Mounting	2		
17	10	35386	SCREW, (5/16-18 X 1 Inch), Moun	4		
18	88	79023A90	FUSE ASSEMBLY, (90 AMP)	1		
19	11	21908	NUT, Mounting Bracket Screw	4		
20	10	31830	BOLT, (.375-24 x 1.75), Hydaulic Pi	2		
21	11	24883	NUT, Hydaulic Pump Book	2		
22	10	94279	BRACKET, Mounting - Starter Soler	1		
23	10	48060	SCREW, Mounting Bracket to Hydr	2		
24	11	29488	NUT, (#10-32), Mounting Bracket to	1		
25	89	96158	STARTER SOLENOID	2		
26	12	96457	WASHER, Fuse Terminal	1		
27	11	26419	NUT, (#8-32), Solenoid Terminal	4		
28	13	26992	LOCKWASHER, (.250), Solenoid T	4		
29	11	94330	NUT, (.250-20), Solenoid Terminal	4		
30	85	96535	BOOT, Rubber Starter Solenoid Te	1		
31	10	41508	SCREW, (.250-20 x .50), Starter So	4		
32		94275	LINK, Soleniod to Solenoid	1		
33	84	79139A13	BATTERY LEAD	1	(Positive)	
34	11	21825	NUT, (.25-28), Fuse Terminal	1		