



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1603	1868A 2	GEAR HOUSING ASSEMBLY, COM	1,1	SEE NOTE BELOW	
1	1603	1868A 1	GEAR HOUSING ASSEMBLY	1,1		
2	16	29078	STUD, GEAR HOUSING TO D	2,2		
3	31	20231	BEARING, ROLLER - DRIVE S	1,1		
4		25136	SHAFT, SHIFT - LOWER	1,1		
5	18	20233	CLIP, RETAINING - SHIFT SHAF	1,1		
6	23	28374A 1	BUSHING ASSEMBLY, SHIFT SI	1,1		
7	26	31249	OIL SEAL	1,1		
8	25	25439	"OIL" RING, SHIFT SHAFT BUS	1,1		
9		25138	CAM, LOWER - REVERSE LOCK	1,1		
10		29823	CAM, UPPER - REVERSE LOCK	1,1		
11	45	29617A 1	DRIVE SHAFT ASSEMBLY	1,1		
12	53	29116	RING, RETAINING - BALL BEA	1,1		
13	43	20834	GEAR, PINION	1,1		
14	14	29163	TAB WASHER, PINION GEAR S	1,1		
15	10	20925	SCREW, PINION GEAR TO DRIP	1,1		
16	15	20929A 1	SHIM, DRIVE SHAFT BEARING	AR,AR		
17	30	20861	BEARING, BALL - DRIVE SHAFT	1,1		
18	25	20266	"O"RING, WATER PUMP CART	1,1		
19	46	29117A 1	WATER PUMP CARTRIDGE AS	1,1		
20	26	23300	OIL SEAL	1,1		
21		28091	INSERT, WATER PUMP CART	1,1		
22	28	28657	KEY, WATER PUMP CARTRIDGE	1,1		
23	47	20268	IMPELLER, WATER PUMP	1,1		
24	17	23733	PIN, IMPELLER DRIVE	1,1		
25		20272	PLATE, OUTLET - WATER PUM	1,1		
26		20270A 2	WATER PUMP COVER ASSEMBLY	1,1		
27	26	23517	OIL SEAL	1,1		
28	25	20273	RING, RUBBER - CENTRIFUGAL	1,1		
29	25	29619	"O"RING, UPPER - DRIVE SHAF	1,1		
30	10	28634	SCREW, GREASE FILLER AND	2,2		
31	12	20260	WASHER, GREASE FILLER ANI	2,2		
32	10	28653	SCREW, GEAR HOUSING VENT	1,1		
33	12	20262	WASHER, GEAR HOUSING VENT	1,1		