



| Parts List |       |         |                                |         |                          |          |
|------------|-------|---------|--------------------------------|---------|--------------------------|----------|
| Ref        | Class | Part    | Description                    | Qty     | Comment                  | Footnote |
| 1          | 11    | 22339   | NUT, FLYWHEEL                  | 1,1,1,1 |                          |          |
| 2          | 12    | 26617   | WASHER, FLYWHEEL NUT           | 1,1,1,1 |                          |          |
| 3          | 28    | 20094   | KEY, FLYWHEEL DRIVE            | 1,1,1,1 |                          |          |
| 4          | 208   | 1996A 1 | FLYWHEEL ASSEMBLY - NOT AS     | 1,1,1,1 |                          |          |
| 4          | 215   | 1850A 6 | FLYWHEEL ASSEMBLY              | 1,1,1,1 |                          |          |
| 4          | 215   | 1850A 4 | FLYWHEEL ASSEMBLY              | 1,1,1,1 | SERIAL J1477910-01480087 |          |
| 4          | 215   | 2026A 2 | FLYWHEEL ASSEMBLY              | 1,1,1,1 | SERIAL J1480088-01480159 |          |
| 5          |       | 29788   | FLANGE, FLYWHEEL PULLEY        | 1,1,1,1 |                          |          |
| 6          |       | 30306   | PULLEY, FLYWHEEL               | 1,1,1,1 |                          |          |
| 7          |       | 29787   | HUB, FLANGE - FLYWHEEL PULLEY  | 1,1,1,1 |                          |          |
| 8          | 17    | 26618   | DOWEL PIN, FLYWHEEL PULLEY     | 1,1,1,1 |                          |          |
| 9          | 50    | 25263   | RATCHET, FLYWHEEL LATERAL      | 1,1,1,1 |                          |          |
| 10         | 10    | 29238   | SCRW,RATCHET TO FLYWHEEL       | 3,3,3,3 |                          |          |
| 11         | 398   | 1455    | STATOR, ALTERNATOR - FLYWHEEL  | 1,1,1,1 | SERIAL J1477910-01480087 |          |
| 11         | 398   | 2027    | STATOR, ALTERNATOR - FLYWHEEL  | 1,1,1,1 | SERIAL J1480088-01480159 |          |
| 11         | 398   | 2085    | STATOR, ALTERNATOR - FLYWHEEL  | 1,1,1,1 |                          |          |
| 12         |       | 22647   | DISCONNECT, KNIFE SPLICE       | 2,2,2,2 |                          |          |
| 13         | 32    | 26528   | SLEEVE, RUBBER - STATOR LEAD   | 2,2,2,2 |                          |          |
| 14         | 10    | 29249   | SCREW, STATOR TO UPPER END     | 4,4,4,4 | SERIAL J1477910-01480087 |          |
| 14         | 10    | 32614   | SCREW, STATOR TO UPPER END     | 4,4,4,4 | SERIAL J1480088-01480159 |          |
| 15         | 54    | 24836   | CLIP, STATOR LEAD TO CRANK     | 1,1,1,1 |                          |          |
| 16         | 10    | 30009   | SCREW, STATOR LEAD CLIP FASTEN | 1,1,1,1 |                          |          |