



		Parts List				
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30269A 2	FUEL PUMP ASSEMBLY	1,1,1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2,2,2		
3	21	30430	VALVE, CHECK	2,2,2,2		
4		23004	RETAINER, CHECK VALVE	1,1,1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2,2,2		
6	27	24863	GASKET, FUEL PUMP	2,2,2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1,1,1		
8		23008	COVER, FUEL PUMP	1,1,1,1		
9	27	30276	GASKET, FUEL PUMP COVER	1,1,1,1		
10	10	29126	SCREW, FUEL PUMP MOUNTING	2,2,2,2		
11	10	29029	SCREW, FUEL PUMP MOUNTING	1,1,1,1		
12	22	22949	CONNECTOR, PUMP INLET TO F	1,1,1,1		
13	22	22946	SLEEVE, RUBBER - CONNECTOF	1,1,1,1		
14	11	22948	NUT, CONNECTOR TO FUEL LINI	1,1,1,1		
15	32	30035	FUEL LINE, FUEL PUMP TO LOW	1,1,1,...		
16	22	22995	ELBOW, FUEL PUMP INLET	1,1,1,1		
17	22	22946	SLEEVE, RUBBER	1,1,1,1		
18	11	22948	NUT, ELBOW	1,1,1,1		
19	32	30036	FUEL LINE, FUEL PUMP TO ADAF	1,1,1,1		
20		22833	ADAPTOR, CHECK UNIT (FUEL L	,1,1,...		
20		30186	ADAPTOR, CHECK UNIT (FUEL L	1,1,1,1		
21		23069	STEM, CHECK UNIT ADAPTOR	,1,1,...		
21		30187	STEM, CHECK UNIT ADAPTOR	1,1,1,1		
22	25	20415	O RING, ADAPTOR STEM	1,1,1,1		
23	24	23067	SPRING, ADAPTOR STEM	,1,1,...		
23	24	30189	SPRING, ADAPTOR STEM	1,1,1,1		
24		30188	CUP WASHER, ADAPTOR	1,1,1,1		
25	10	20784	SCREW, ADAPTOR TO BOTTOM	2,2,2,2		
26	11	24652	NUT, ADAPTOR SCREW	2,2,2,2		
27	32	30038	FUEL LINE, UPPER TO LOWER F	,1,1,...		
27A	32	32094	FUEL LINE, FUEL PUMP TO FILTE	,1,1,1		
28	22	25956	TEE ASSEMBLY, LOWER FILTER	,1,1,...		