



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53238A	FUEL PUMP ASSEMBLY (SEE NO	1		
2	21	30430A	CHECK VALVE ASSEMBLY	2		
3		53245A	DIAPHRAGM KIT, FUEL PUMF	1		7
4			GASKET, FUEL PUMP TO B,	1		7
5			GASKET, FUEL PUMP	2		7
6		53241	BASE, FUEL PUMP	1	UNITED STATES 5270783 AND I	
7		61541	COVER, FUEL PUMP	1		
8	10	32627	SCREW, FUEL PUMP TO BASE (1	4		
9	12	20128	WASHER, FUEL PUMP SCREWS	4		
10	22	61544	ELBOW, HOSE TO FUEL PUMP (2	1		
11	22	39079	ELBOW, FUEL PUMP TO CARBUF	1		
12	32	52742A	HOSE ASSEMBLY	1	FUEL PUMP TO CYLINDER BLO	
13	22	33373	ELBOW, HOSE TO CYLINDER BL	1		
14	54	20387	CLAMP, FUEL PUMP HOSE TO EL	2		
15	32	61642	FUEL LINE, INLET - ADAPTOR TC	1		
16		30188	CUP WASSHER, ADAPTOR	1		
17	24	23067	SPRING, ADAPTOR STEM	1		
18	25	20415	"O" RING, ADAPTOR STEM	1		7
19		23069	STEM, CHECK UNIT ADAPTOR	1		
20		22833	ADAPTOR, CHECK UNIT	1		
21	10	37923	SCREW	1	CHECK UNIT ADAPTOR TO BOT	
-	27	46232A73	GASKET SET			