



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	336	4524A 1	COVER ASSEMBLY	1		
2	10	60491	SCREW, COVER TO MODULE (5/	2		
3	336	4516A 2	IGNITION MODULE ASSEMBLY	1		
4	10	59800	SCREW, MODULE TO STATOR (E	2		
5	10	36046	SCREW, MODULE - COIL LEAD (1.	3		
6	13	26996	LOCKWASHER, MODULE	2	IGNITION COIL LEAD TERMINAL	
7	11	45076	NUT, MODULE - IGNITION COIL L	2		
8	336	4470A 1	COIL, HIGH SPEED	1		
9	54	59538	CLIP, COIL RETAINING	2		
10	54	59539	CLIP, COIL RETAINING	2		
11	336	4463	CONDENSER ASSEMBLY	1		
12	10	62269	SCREW, CONDENSER ATTACHM	2		
13	336	4476A 1	STATOR ASSEMBLY	1		
14	336	4458	PLATE, STATOR HOLD DOWN	2		
15	10	35400	SCREW, HOLD DOWN PLATE TC	4		
16	15	33910015	SHIM, STATOR PLATE TO UPPE	1		
17	336	3989	WICK, CAM WIPER - STATOR ASE	1		
18	336	4318A 3	MAKER ASSEMBLY, STATOR HO	1		
19	10	56266	SCREW, MAKER TO STATOR HO	2		
20		56520	CAM, THROTTLE	1		
21	10	28063	SCREW, THROTTLE CAM TO CO	2		
22	12	37998	WASHER, THROTTLE CAM ATTA	1		
23		56757A 5	JUMPER WIRE ASS'Y	1	CONDENSER TO COVER (BLACK)	
24		56318A11	LEAD ASSEMBLY	1	MODULE TO IGNITION COIL (GF	
25		38938	BOOT, LEAD ASSEMBLY	1		
26		56316A 4	CABLE ASSEMBLY	1	STATOR HOUSING (WHITE - 10	
27		38938	BOOT, CABLE	1		
28	336	4460	INSULATOR, CABLE TO CONTACT	1		
29	11	56325	NUT, CABLE INSULATOR	1		