



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	187	5752	BOTTOM COWL	1		
2		36187A 1	LEVER ASSEMBLY, CLAMPING - I	1		
3		36188A 1	LEVER ASSEMBLY, CLAMPING - O	1		
4	53	55891	FASTENER, CLAMPING LEVER	2		
5	84	60871A 7	GROUND STRAP ASSEMBLY	1		
6	24	63399	SPRING, GROUND STRAP	1		
7	23	26819	BUSHING, NYLON - CLAMPING LI	4		
8	23	31293	BUSHING, RUBBER - CLAMPING	2		
9	17	58997	PIN, ROLL - CLAMPING LEVER	2		
10	10	28634	SCREW, BOTTOM COWL FLUSHI	1		
11	12	20260	WASHER, BOTTOM COWL FLUSI	1		
12		56712	NOZZLE, TELL TALE	1		
13	10	35519	SCREW, TELLL TALE NOZZLE T	1		
14	32	34395A 1	TUBE, TELL TALE (7 1/4")	1		
15	22	25885	ELBOW, TELL TALE - HOSE TO C	1		
16	27	45748	GASKET, POWERHEAD TO BOTI	1		7
17	27	55847	GASKET	1	EXHAUST RELIEF COVER TO B	7
18		55936	COVER, EXHAUST RELIEF	1		
19	10	31206	SCREW, EXHUAUST RELIEF COVE	9		
20	87	69508A 2	STOP SWITCH ASSEMBLY	1	(INCLUDES A-87-69509A1 COVEI	
21	13	69845	LOCKWASHER, STOP SWITCH	1		
22	11	69844	NUT, STOP SWITCH	1		
-	27	46232A73	GASKET SET			