



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	336	4524A 1	COVER ASSEMBLY	1			
2	10	60491	SCREW, COVER TO MODULE (5/	2			
3	336	4516A 2	IGNITION MODULE ASSEMBLY	1			
4	10	59800	SCREW, MODULE TO STATOR (E	2			
5	10	36046	SCREW, MODULE - COIL LEAD (1.	3			
6	13	26996	LOCKWASHER, MODULE	2	IGNITION COIL LEAD TERMINAL		
7	11	45076	NUT, MODULE - IGNITION COIL L	2			
8	336	4470A 1	COIL, HIGH SPEED	1			
9	54	59538	CLIP, COIL RETAINING	2			
10	54	59539	CLIP, COIL RETAINING	2			
11	336	4463	CONDENSER ASSEMBLY	1			
12	10	62269	SCREW, CONDENSER ATTACHM	2			
13	336	4476A 1	STATOR ASSEMBLY	1			
14	336	4458	PLATE, STATOR HOLD DOWN	2			
15	10	35400	SCREW, HOLD DOWN PLATE TC	4			
16	15	33910015	SHIM, STATOR PLATE TO UPPE	1			
17	336	3989	WICK, CAM WIPER - STATOR ASE	1			
18	336	4318A 3	MAKER ASSEMBLY, STATOR HO	1			
19	10	56266	SCREW, MAKER TO STATOR HO	2			
20		56520	CAM, THROTTLE	1			
21	10	28063	SCREW, THROTTLE CAM TO CO	2			
22	12	37998	WASHER, THROTTLE CAM ATTA	1			
23		56757A 5	JUMPER WIRE ASS'Y	1	CONDENSER TO COVER (BLACK)		
24		56318A11	LEAD ASSEMBLY	1	MODULE TO IGNITION COIL (GF		
25		38938	BOOT, LEAD ASSEMBLY	1			
26		56316A 4	CABLE ASSEMBLY	1	STATOR HOUSING (WHITE - 10		
27		38938	BOOT, CABLE	1			
28	336	4460	INSULATOR, CABLE TO CONTACT	1			
29	11	56325	NUT, CABLE INSULATOR	1			