



1698

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		16837A 2	ALTERNATOR KIT	1		
2		16074T	ALTERNATOR	1		
3	10	16059	SCREW	2		
4	54	16060	CLAMP	1		
5	10	16821	SCREW	1		
-		16838A 4	BATTERY CHARGING KIT (RECTI	1	[6 AMP]	
6		16076	RECTIFIER	1	(Use with 20MM Screw)	
6		16076A 1	RECTIFIER KIT	1	(Use with 25MM Screw)	
7	89	16077	FUSE	1		
8	10	16123	SCREW	1	[25MM]	
8	10	16078	SCREW	1	[20MM]	
9	13	16079	LOCKWASHER	1		
10	12	16080	WASHER	1		
11	54	813275	CLAMP	1		
12	11	16081	NUT	1		
13	84	16082	EXTENSION HARNESS	1		
14		16839A 4	VERTICAL ROPE GUIDE KIT	1		
15		16113	SEAL PLATE	1		
16	10	17173	SCREW	4		
17		16841A 2	FLUSHING ATTACHMENT	1		
18	84	17175	HARNESS	1		
19		853828	HANDLE	1	[0.8M]	
19		853828 1	HANDLE	1	[1.0M]	
20		803799A 1	IGNITION CHECKER	1		
0	22	135630 3	CONNECTOR, Fuel (Engine End)	1	(For 6.6 Gal.) [25L]	
0	22	135630 7	QUICK DISCONNECT (Tank End)	1	(For 6.6 Gal.) [25L]	
0	22	15781A12	REMOTE/FUEL TANK ADAPTOR	1	[4 HP]	
0		12612Q 2	FLUSHING ATTACHMENT (Allows	1		
0		14171Q 2	MOTOR LOCK	1		
0		82776	CABLE & PULLEY ATTACHING KI	1		