



14508

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		16074T04	ALTERNATOR	1		
2	10	16123	SCREW, (25mm)	2		
3	54	16060	CLAMP	1		
4	10	16821	SCREW	1		
5		16076A.1	RECTIFIER KIT	1		
6	89	16077	FUSE	1		
7	10	16123	SCREW, (25mm)	1		
8	13	16079	LOCKWASHER	1		
9	12	16080	WASHER	1		
10	54	813275	CLAMP	1		
11	11	16081	NUT	1		
12	84	16822	BATTERY CABLE	1		
13	25	16823	GROMMET	1		
14	84	16082	EXTENSION HARNESS	1		
15	87	823037A04	EMERGENCY STOP SWITCH ASS	1		
16		823054	LANYARD	1		
17	12	16080	WASHER	2		