



19274

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		99659A21	MANIFOLD ASSEMBLY (BLACK)	1		
1		99659A22	MANIFOLD ASSEMBLY (GRAY)	1		
2	22	99616	PIPE PLUG, MANIFOLD	11		
3		41493A 9	TRIM CYLINDER ASSEMBLY (BL)	1		
3		41493A 6	TRIM CYLINDER ASSEMBLY (GR)	1		
4		41492A 1	GUIDE ASSEMBLY	1		
5	25	41478A 1	REPAIR KIT	1		
6		41482A 3	CHECK VALVE KIT	1		
7		99638A 1	GUIDE ASSEMBLY, TRIM ROD	2		
8		43397A 7	PISTON AND ROD ASSEMBLY, P	1		
9	35	12184A 1	TRIM FILTER ASSEMBLY	1		
10		43398A 3	PISTON AND ROD ASSEMBLY, S	1		
11	17	13794	PIN, Groove, TRIM CYLINDER (UF	1		
12		812843A 1	VALVE ASSEMBLY	1		
12A	53	812844	E RING, VALVE ASSEMBLY	1		
13	10	40003 27	SCREW, (M6 x 14), COVER	4		
14	12	43450	WASHER, COVER SCREW	4		
15		99642	COVER, MANIFOLD	1		
16	25	48462A 2	O-RING KIT	1		
17	19	99609A 1	PLUG ASSEMBLY	1		
18		99641A 1	SHAFT ASSEMBLY	1		
19	22	99616	PIPE PLUG, SHAFT	2		
20	10	40088 20	SCREW, (M6 x 20), PUMP AND MI	2		
21	13	40025 6	LOCKWASHER, (M6)	2		
22		99186T	PUMP AND MOTOR	1		
23		99625	SHAFT, UPPER	1		
24		43396A 2	ANODE ASSEMBLY	1		
25	10	40003 32	SCREW, (M6 x 35), ANODE	2		
26	12	29245	WASHER, (.281 x .500 x .060), A	2		
27		99630 1	STRIKER PLATE, TRIM SHAFT	2		
28	13	58643	LOCKWASHER, (.375)	2		
29	11	46335	NUT, (.375-24)	2		
30	84	99695A 1	CONTROL HARNESS ASSEMBLY	1		
30	84	17201A 2	CONTROL HARNESS, (17.00 Inch	1		
31	84	87379A39	WIRE ASSEMBLY (2-3/4" - RED)	2		
32	89	96158	SOLENOID STARTER	3		
33	10	41508	SCREW, (.250-20 x .500), STARTE	6		
34	11	26419	NUT, (#8-32), SOLENOID TERMIN	4		
35	13	26992	LOCKWASHER, (.250), SOLENOID	8		
36	11	94330	NUT, (.250-20), SOLENOID TERM	4		
37	95	97861	INSULATOR, STARTER SOLENOI	2		