



| Parts List | | | | | | |
|------------|-------|----------|-------------------------------|-----|----------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 92975A 6 | HYDRAULIC PUMP ASSEMBLY | 1 | SEE "HYDRAULIC PUMP ASSEM | |
| 2 | 25 | 48171 | "O" RING, MANIFOLD PLATE | 4 | | |
| 3 | 10 | 79953 | SCREW, FILLER - HYDRAULIC | 1 | | |
| 4 | 12 | 20260 | WASHER, SEALING - FILLER S | 1 | | |
| 5 | 10 | 62269 | SCREW, VENT - HYDRAULIC PI | 1 | | |
| 6 | | 45336 | PLATE, MANIFOLD | 1 | | |
| 7 | | 45197A 2 | CONTROL VALVE ASSEMBLY | 1 | | |
| -- | 25 | 48171 | "O" RING, MANIFOLD PLATE (S | 4 | | |
| 8 | 25 | 45254 | "O" RING, CONTROL VALVE (3- | 1 | | |
| 9 | 25 | 48171 | "O" RING, CONROL VALVE (1/2 | 1 | | |
| 10 | 25 | 45253 | "O" RING, CONTROL VALVE 5/ | 2 | | |
| 11 | 10 | 56500 | SCREW | 4 | VALVE AND MANIFOLD PLATE 1 | |
| 12 | 22 | 46008 | PLUG, CONTROL VALVE (1/2-20" | 2 | | |
| 13 | 84 | 79147A 3 | CONNECOTR AND HARNESS | 1 | | |
| 14 | 88 | 79091 | FUSE (20 AMP) | 1 | | |
| 15 | 84 | 95084A 3 | WIRE ASSEMBLY, FUSE | 1 | | |
| 16 | | 45377 | BRACKET, MOUNTING | 2 | | |
| 17 | 10 | 35386 | SCREW | 4 | MOUNTING BRACKET TO HYDF | |
| 18 | 13 | 39107 | LOCKWASHER, MOUNTING BRA | 4 | | |
| 19 | 11 | 21908 | NUT, MOUNTING BRACKET SCR | 4 | | |
| 20 | 10 | 31830 | BOLT, HYDRAULIC PUMP TO BO. | 2 | | |
| 21 | 11 | 99405 | NUT, HYDRAULIC PUMP BOLT | 2 | | |
| 22 | | 94279 | BRACKET, MOUNTING - STARTE | 1 | | |
| 23 | 10 | 48063 | SCREW | 2 | MOUNTING BRACKET TO HYDF | |
| 24 | 11 | 29488 | NUT | 1 | MOUNTING BRACKET TO HYDF | |
| 25 | 89 | 96158 | STARTER SOLENOID | 2 | | |
| 26 | 13 | 26995 | LOCKWASHER, SOLENOID TERN | 4 | | |
| 27 | 11 | 26419 | NUT, SOLENOID TERMINAL (8-3 | 4 | | |
| 28 | 13 | 26992 | LOCKWASHER, SOLENOID TERN | 4 | | |
| 29 | 11 | 94330 | NUT, SOLENOID TERMINAL (1/4 | 4 | | |
| 30 | 85 | 96535 | BOOT, RUBBER - STARTER SOLI | 4 | | |
| 31 | 10 | 41508 | SCREW | 4 | STARTER SOLENOID TO MOUN | |
| 32 | | 94275 | LINK, SOLENOID TO SOLENOID | 1 | | |
| 33 | 84 | 79139A13 | BATTERY LEAD (POSITIVE) | 1 | | |
| 33 | 84 | 79138A 1 | BATTERY LEAD (NEGATIVE) | 1 | | |
| 34 | 88 | 79149 | CIRCUIT BREAKER (20 AMP) - EA | 1 | | |
| 35 | 10 | 69014 | SCREW, CIRCUIT BREAKER - EA | 2 | | |
| 36 | 11 | 45076 | NUT | 2 | CIRCUIT BREAKER TERMINAL (| |
| 37 | 84 | 87379A 5 | WIRE | 1 | SOLENOID TO CIRCUIT BREAKE | |
| 38 | 88 | 79023A90 | FUSE ASSEMBLY (90 AMP) | 1 | | |
| 39 | 12 | 96457 | WASHER, FUSE TERMINAL | 1 | | |