



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	7406A34	GEAR HOUSING ASSEMBLY (SHI	1		
-	1643	7406A35	GEAR HOUSING ASSEMBLY (LOP	1		
-	1643	7406A43	GEAR HOUSING ASSEMBLY (X-L)	1		
-	1643	7406A38	GEAR HOUSING ASSEMBLY (SHI	1		
-	1643	7406A39	GEAR HOUSING ASSEMBLY (LOP	1		
-	1643	7406A43	GEAR HOUSING ASSEMBLY (X-L)	1		
1	1643	7406A16	GEAR HOUSING ASSEMBLY ME	1		
1	1643	7406A41	GEAR HOUSING ASSEMBLY MA	1		
51		76039	SHIFT CAM	1		
52	15	38374A	SHIM, BEARING CUP TO GEAR	AR		
53	31	38356A	TAPERED ROLLER BEARING A	1		
54	43	55608A	FORWARD GEAR	1		
55	31	21739	ROLLER BEARING - FORWARD	1		
56		38441	CAM FOLLOWER	1		
57		20843	SLIDE, CROSS PIN	1		
58	24	38114	SPRING, RETAINING - CROSS P	1		
59	52	92911	RATCHET, SLIDING CLUTCH	1		
60	17	38113	CROSS PIN - RATCHET TO PRO	1		
61	24	39845	SPRING, COMPRESSION - CAM	1		
62	44	75365	PROPELLER SHAFT	1		
63	43	79158	REVERSE GEAR	1		
64	12	32004	WASHER, THRUST - REVERSE	1		
65	30	20839	BALL BEARING - REVERSE GE	1		
66	25	31986	"O" RING, BEARING CARRIER	1		3
67		69386A	BEARING CARRIER ASSEMBLY	1		
68	31	21700	ROLLER BEARING - BEARING	1		
69	26	69188	OIL SEAL, BEARING CARRIER	1		
70	26	69189	OIL SEAL, BEARING CARRIER	1		
71	28	30281	KEY, LOCATING - BEARING CA	1		
72	14	53012	TAB WASHER, GEAR HOUSING	1		
73	11	87763	NUT, GEAR HOUSING	1		
74		31640A	TRIM TAB ASSEMBLY, GEAR H	1		
75	10	66024	SCREW, TRIM TAB TO GEAR H	1		
76	12	45175	WASHER, DRIVE SHAFT HOUSIN	1		
77	11	34863	NUT, DRIVE SHAFT HOUSING S	1		
78	12	65791	WASHER, HOUSING TO STUD (7	1		
79	11	34933	NUT, STUD (7/16")	1		
80		73345A	THRUST HUB, FRONT	1		
81	14	76281	TAB WASHER, PROPELLER NUT	1		
82	11	69578A	PROPELLER NUT	1		
		72486A2	GASKET SET			