



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		76395A 5	PUMP ASSY (METAL RES	1	SEE HYDRAULIC PUMP ASSEMI	
1		92975A 6	PUMP ASSY (PLASTIC RE	1	SEE HYDRAULIC PUMP ASSEMI	
1	25	48171	"O" RING, MANIFOLD PLATE (SI	4		
2	10	79953	SCREW, FILLER - HYDRUALIC	1		
3	12	20260	WASHER, SEALIN - FILLER SCF	1		
4	10	62269	SCREW, VENT - HYDRAULIC PI	1		
5		32979	BATTERY LEAD (POSITIVE)	1		
6		32988	BATTERY LEAD (NEGATIVE)	1		
7		45336	PLATE, MANIFOLD	1		
8		45197A 2	CONTROL VALVE ASSEMBLY	1		
--	25	48171	"O" RING, MANIFOLD PLATE (SI	4		
9	25	45254	"O" RING, CONTROL VALVE (3,	1		
10	25	48171	"O" RING, CONTROL VALVE (1,	1		
11	25	45253	"O" RING, CONTROL VALVE (5,	2		
12	10	56500	SCREW	4	VALVE AND MANIFOLD PLATE 1	
13	22	46008	PLUG, CONTROL VALVE (1/2-20"	2		
14	84	74023A 1	CONNECTOR AND HARNESS	1		
15		45377	BRACKET, MOUNTING	2		
16	10	35386	SCREW	4	MOUNTING BRACKET TO HYDF	
17	13	39107	LOCKWASHER, MOUNTING BRA	4		
18	11	21908	NUT, MOUNTING BRACKET SCR	4		
19	10	68298	BOLT, HYDRUALIC PUMP TO BO,	2		
20	11	99405	NUT, HYDRAULIC PUMP BOLT	2		
21	89	68258	STARTER SOLENOID	2		
22	13	26996	LOCKWASHER, SOLENOID TERN	4		
23	11	68219	NUT, SOLENOID TERMINAL (#10	4		
24	13	26993	LOCKWASHER, SOLENOID TERN	4		
25	11	68292	NUT, SOLENOID TERMINAL (5/1)	4		
26		46265	BOOT, RUBBER - STARTER SOLI	4		
27		74407	BRACKET, MOUNTING - STARTE	1		
28	10	21140	SCREW	2	MOUNTING BRACKET TO HYDF	
29	13	26992	LICKWASHER, MOUNTING BRAC	2		
30	11	24656	NUT	1	MOUNING BRACKET TO HYDRA	
31		26901	BUMPER, RUBBER - SOLENOID E	1		
32	84	79139A 2	JUMPER WIRE (POSITIVE)	1		
32		55992	JUMPER WIRE (NEGATIVE)	1		
33		74406	BRACKET, MOUNTING - STARTE	1		
34	10	69028	SCREW	2	MOUNTING BRACKET TO HYDF	
35	13	26992	LOCKWASHER, MOUNTING BRA	2		
36	10	32417	SCREW	2	STARTER SOLENOID TO MOUN	
37	12	26992	LOCKWASHER, STARTER SOLE	2		