



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A 1	RECTIFIER	1		
2	11	45076	NUT, RECTIFIER TERMINAL	3		
3	10	20411	SCREW, RECTIFIER TO SWITCH	2		
4	50	73521	STARTER MOTOR	1		
5		57247	STOP, RUBBER - STARTER MOT	1		
6		56703	COLLAR, RUBBER - STARTER MI	2		
7	23	56774	SPACER, COLLAR TO BRACKET	AR		
8	84	93389A 1	WIRE, STARTER MOTOR/SOLEN	1		
9	11	64015	NUT, WIRE TO STARTER MOTOI	1		
10	84	93388A 2	WIRE, STARTER MOTOR/BRACK	1		
11	10	69035	SCREW, WIRE TO STARTER MO	1		
12	89	76545	STARTER SOLENOID	1	UNITED STATES 6146848 AND I	
13	11	45076	NUT, SOLENOID TERMINAL (#10	2	UNITED STATES 6146848 AND I	
14	11	21908	NUT, SOLENOID TERMINAL (5/11	2	UNITED STATES 6146848 AND I	
12	89	96158	STARTER SOLENOID	1	UNITED STATES 6146849 AND I	
13	11	26419	NUT, SOLENOID TERMINAL (#8-	2	UNITED STATES 6146849 AND I	
14	11	94330	NUT, SOLENOID TERMINAL (1/4-	2	UNITED STATES 6146849 AND I	
15	10	98253	SCREW, SOLENOID TO SUPPOR	2		
16	13	26992	WASHER, STARTER SOLENOID	2		
17	85	97861	INSULATOR, STARTER SOLENO	1		
18	84	96277A 2	WIRING HARNESS	1		
19	99	79091	FUSE	1		
20	84	95084A 2	WIRE ASSEMBLY, FUSE	1		
21		88751	CLAMP, WIRING HARNESS	1		
22	24	28357	SPRING, WIRING HARNESS	1		
23	10	23702	SCREW, WIRING HARNESS CLAI	1		
24	12	72761	WASHER, WIRING HARNESS CL	1		
25	84	88439A 3	BATTERY CABLE (POSITIVE)	1		
25	84	88439A 4	BATTERY CABLE (NEGATIVE)	1		