



| Parts List |       |          |                              |     |                            |          |
|------------|-------|----------|------------------------------|-----|----------------------------|----------|
| Ref        | Class | Part     | Description                  | Qty | Comment                    | Footnote |
| 1          | 863   | 8358A 4  | CYLINDER BLOCK/CRANKCASE     | 1   |                            |          |
| 2          |       | 72038    | BRACKET, STARTER MOTOR       | 1   |                            |          |
| 3          | 10    | 73279    | SCREW, BRACKET TO CRANKC     | 2   |                            |          |
| 4          | 13    | 26993    | LOCKWASHER, BRACKET SCR      | 4   |                            |          |
| 5          |       | 76867    | COVER, STARTER MOTOR (LO     | 1   |                            |          |
| 6          | 10    | 73279    | SCREW, COVER TO CRANKCA      | 2   |                            |          |
| 7          |       | 46933A 7 | CABLE ASSEMBLY, GROUND       | 2   |                            |          |
| 8          | 17    | 20032    | DOWEL PIN, CYLINDER BLOC     | 2   |                            |          |
| 9          | 16    | 68164    | STUD, CARBURETOR (1-1/4")    | 4   |                            |          |
| 10         | 16    | 68165    | STUD                         | 2   | CRANKCASE TO DRIVE SHAFT I |          |
| 11         | 17    | 20033    | DOWEL PIN, CRANKCASE TO C    | 2   |                            |          |
| 12         | 16    | 87901    | STUD, CYLINDER BLOCK TO D    | 2   |                            |          |
| 13         | 16    | 68166    | STUD, CYLINDER BLOCK TO D    | 2   |                            |          |
| 14         | 16    | 68167    | STUD, CYLINDER BLOCK TO D    | 2   |                            |          |
| 15         | 10    | 55511    | SCREW, CRANKCASE TO CYLIND   | 11  |                            |          |
| 15         | 10    | 31984    | SCREW, CRANKCASE TO CYLIND   | 5   |                            |          |
| 15         | 10    | 73275    | SCREW, CRANKCASE TO CYLIND   | 2   |                            |          |
| 16         | 12    | 70132    | WASHER, CRANKCASE SCREW      | 18  |                            |          |
| 17         | 10    | 20359    | SCREW, CENTER MAIN BEARING   | 1   |                            |          |
| 17         | 10    | 98260    | SCREW, MAIN BEARING LOCKIN   | 2   |                            |          |
| 18         | 14    | 20091    | TAB WASHER, CENTER BEARING   | 3   |                            |          |
| 19         | 32    | 99127109 | TUBE, BALANCE - MAIN BEARING | 1   |                            |          |
| 20         | 22    | 99664    | ELBOW, BALANCE TUBE TO CYL   | 2   |                            |          |
| 21         | 22    | 65857    | CONNECTOR, BLEED HOSE (UPF   | 1   |                            |          |
| 22         | 32    | 99387 79 | HOSE, CYLINDER BLEED (11")   | 1   |                            |          |
| 23         | 22    | 42867    | CHECK VALVE, BLEED HOSE (LO  | 1   |                            |          |
| 24         |       | 99156    | INDICATOR, TIMING - ELECTRIC | 1   |                            |          |
| 25         | 10    | 39349    | SCREW                        | 1   | INDICATOR TO CRANKCASE (3/ |          |
| 26         | 13    | 26993    | LOCKWASHER, INDICATOR SCR    | 1   |                            |          |