



7482

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	9539A 2	GEAR HOUSING ASSY. (SHORT	1		
-	1643	9539A 3	GEAR HOUSING ASSY. (LONG SI	1		
-	1643	9539A 9	GEAR HOUSING ASSEMBLY (LOP	1		
1	1643	9539A 1	GEAR HOUSING (BLACK-BASIC	1		
1	1643	9539A 8	GEAR HOUSING ASSEMBLY (G	1		
51		76039	SHIFT CAM	1		
52	15	38374A 1	SHIM, BEARING CUP (.002-3-5-1	AR		
53	31	38356A 1	BEARING SET	1		
54	43	88018A 1	FORWARD GEAR	1		
55	31	21739	ROLLER BEARING, FORWARD	1		
56		38441	CAM FOLLOWER	1		
57		20843	SLIDE, CROSS PIN	1		
58	24	39845	SPRING, COMPRESSION-CAM f	1		
59	52	92911	RATCHET, SLIDING CLUTCH	1		
60	17	38113	CROSS PIN, RATCHET TO PRO	1		
61	24	38114	SPRING, RETAINING-CROSS PI	1		
62	44	75365	PROPELLER SHAFT	1		
63	43	88017	REVERSE GEAR	1		
64	12	32004	WASHER, REVERSE GEAR	1		
65	30	20839	BALL BEARING, REVERSE GEA	1		
66	25	31986	O-RING, BEARING CARRIER	1		2,9
67		69386A 1	BEARING CARRIER ASSEMBLY	1		
68	31	21700	ROLLER BEARING, BEARING	1		
69	26	69188	OIL SEAL, BEARING CARRIER	1		9
70	26	69189	OIL SEAL, BEARING CARRIER	1		9
71	28	30281	KEY, LOCATING, BEARING CAF	1		
72	14	53012	TAB WASHER, GEAR HOUSING	1		
73	11	87763	NUT, GEAR HOUSING	1		
74		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
75	10	66024	SCREW, (.437-14 x 1.75), TRIM	1		
76	12	45175	WASHER, (.406 x .750 x .104), DR	1		
77	11	34863	NUT, (.375-24), DRIVE SHAFT HO	1		
78	12	65791	WASHER, DRIVE SHAFT HOUSIN	1		
79	11	34933	NUT, (.437-20), DRIVE SHAFT HO	1		
80		73345A 1	THRUST HUB, FRONT	1		
81	14	<a href="#">76281</a>	TAB WASHER, PROPELLER	1		
82	11	69578A 1	PROPELLER NUT	1		
-	26	79831A 1	SEAL KIT	1		
-	27	43779A87	GASKET SET	1		