



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2153	5392	TOP COWL (MANUAL)	1		
1	2153	6055	TOP COWL (ELECTRIC)	1		
2		55455	HOOK, TOP COWL LATCH - REAR	1		
3	10	22956	SCREW, REAR HOOK TO TOP COWL	2		
4	13	26992	LOCKWASHER, REAR HOOK MOUNTING	2		
5		37690	SHIELD, REAR - TOP COWL	1		
6	10	37370	SCREW, REAR SHIELD TO TOP COWL	3		
7	13	37371	LOCKWASHER, REAR SHIELD MOUNTING	3		
8		55459A	RETAINER ASSEMBLY, TOP COWL	1		
9		35496	PAD, BUMPER - TOP COWL REAR	1		
10	10	24234	SCREW, RETAINER TO TOP COWL	1		
11	13	39107	LOCKWASHER, RETAINER TO TOP COWL	1		
12		52737	LEVER, COWL LATCH HINGE	1		
13		52739	HINGE, COWL LATCH - TOP COWL	1		
14	17	58998	PIN, COWL LATCH LEVER TO HINGE	1		
15	25	20116	GROMMET, CHOKE KNOB - TOP COWL	1		
16		72020	BRACKET, REAR COWL SUPPORT	1		
18		60577	MOUNT, RUBBER - REAR SUPPORT BRACKET	2		
19	12	21631	WASHER, REAR SUPPORT BRACKET	2		3
20	11	29598	NUT, REAR SUPPORT BRACKET	2		
21		88043A	BRACKET ASSEMBLY, FRONT SUPPORT	1		
22		31014	MOUNT, RUBBER - FRONT SUPPORT BRACKET	2		
23	13	26992	LOCKWASHER	2	FRONT SUPPORT BRACKET	
24	11	29598	NUT, FRONT SUPPORT BRACKET	2		
25	10	37562	SCREW	2	FRONT SUPPORT BRACKET TO	
26		58124A20	SWITCH ASSEMBLY, MERCURY	1		
27	10	69235	SCREW, SWITCH TO FRONT BRACKET	1		
28		45915	TERMINAL BLOCK	1		
29	10	20411	SCREW	1	TERMINAL BLOCK TO FRONT BRACKET	
30	10	69079	SCREW, HARNESS LEADS ATTACHMENT	1		
31	17	36242	ROLL PIN, MERCURY SWITCH	2		
32	87	74605A	SWITCH ASSEMBLY	1	NEUTRAL START USE WITH TERMINAL BLOCK	
33	10	64332	SCREW, SWITCH TO FRONT BRACKET	2		
34	11	24832	NUT, SWITCH SCREW	2		
35		88044	ACTUATOR, INTERLOCK	1		
36	24	88099	SPRING, INTERLOCK ACTUATOR	1		
37	10	37892	SCREW, ACTUATOR TO FRONT BRACKET	1		
38	12	22887	WASHER, ACTUATOR SCREW	1		
39	23	88100	SPACER, ACTUATOR SCREW	1		
40	11	45812	NUT, ACTUATOR SCREW	1		