



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2116	5761A 1	BOTTOM COWL ASSEMBLY	1		
2		57786	COVER, PLUG-BOTTOM COWL H	1	REMOVE-NOT REQUIRED ON E	
3		45862	SCREW, PLUG COVER TO BOT	2	REMOVE-NOT REQUIRED ON E	
4	13	26996	LOCKWASHER, PLUG COVER S	2	REMOVE-NOT REQUIRED ON E	
5	12	20128	WASHER, PLUG COVER SCREW	2	REMOVE-NOT REQUIRED ON E	
6	16	68169	STUD	4	BOTTOM COWL TO REAR SUPP	
7	11	35888	NUT, BOTTOM COWL STUD	4		
8		37695	BOOT, CONTROL CABLE	1		
9		37637	BOOT, FUEL CONNECTOR	1		
10		37692	SUPPORT, EXTERNAL WIRING F	1		
11	10	67916	SCREW, HARNESS SUPPORT TO	2		
12	11	46887	NUT, HARNESS SUPPORT SCRE	2		
13		72466	DRIP TRAY	1		
14	10	45409	SCREW, DRIP TRAY TO BOTTO	3		
15	32	34395A 1	HOSE, TELL TALE HOSE TO BOT	1		
16		69791	NOZZLE, TELL TALE HOSE TO B	1		
17		66849	CLAMP, NOZZLE-TELL TALE	1		
18	10	48408	SCREW, NOZZLE CLAMP TO BO	1		
19	23	75920	SLEEVE, TELL TALE NOZZLE	1		
20	54	68424	CLAMP, TELL TALE NOZZLE	2		
21	87	69508A 4	STOP SWITCH ASSEMBLY-MANU	1		
22	84	62190A 8	WIRE ASSEMBLY, STOP SWITCH	1		
23	11	69844	NUT, STOP SWITCH	1		
24	32	34395A 1	HOSE, DRIP TRAY (7 1/2")	1		