



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	6459A10	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT) UNITED STAT	
-	1643	6459A11	GEAR HOUSING ASSEMBLY, CO	1	(LONG SHAFT) UNITED STATES	
-	1643	7406A14	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT) UNITED STAT	
-	1643	7406A15	GEAR HOUSING ASSEMBLY, CO	1	(LONG SHAFT) UNITED STATES	
1	1643	6459A 3	GEAR HOUSING ASSEMBLY	1	UNITED STATES 4962056 THRI	
1	1643	7406A16	GEAR HOUSING ASSEMBLY	1	UNITED STATES 5193259 AND I	
1A	22	85822A 1	CONNECTOR ASSEMBLY, SP	1		
2	17	46912	PIN, DOWEL - GEAR HOUSIN	2		
3	16	33778	STUD	3	WATER PUMP BODY/BASE TO	
4	16	57933	STUD, GEAR HOUSING TO D	2		
5	31	62091	BEARING, ROLLER - DRIVE S	1		
6		72849A 1	SCREEN ASSEMBLY	1	WATER INTAKE - STARBOARD,	
7	10	36070	SCREW	1	WATER INTAKE SCREEN TO GE	
8	11	45812	NUT, WATER INTAKE SCREE	1		
9		38071	PLATE, SUPPORT - EXHAUST	1		
10		37721	SEAL, EXHAUST TUBE	1		
11	43	55607	GEAR, PINION - DRIVE SHAFT	1		
12	11	55910	NUT, PINION GEAR TO DRIVE	1		
13	27	77417	GASKET, WATER PUMP BASE	1		1,2
14	25	20266	"O" RING, WATER PUMP BASE	1		1,2
15	46	77177A 1	WATER PUMP BASE ASSEMBL	1		
16	26	79831	OIL SEAL, WATER PUMP BAS	1		
17	26	23300	OIL SEAL, WATER PUMP BAS	1		
18	17	35973	DOWEL PIN	2	WATER PUMP BASE TO WATER	
19	27	32769	GASKET, LOWER	1	WATER PUMP BASE TO FACE P	1,2
20		54705	PLATE, FACE	1	WATER PUMP BASE TO WATE	
21	27	32770	GASKET, UPPER	1	FACE PLATE TO WATER PUMP	1,2
22	47	65959	IMPELLER, WATER PUMP	1		
23	28	56662	KEY, IMPELLER DRIVE	1		
24	46	77822A 1	WATER PUMP BODY ASSEMBL	1		
25		48753	INSERT, WATER PUMP BOD	1		
26	12	29245	WASHER, WATER PUMP BOD	3		
27	11	35888	NUT, WATER PUMP BODY AND	3		
28	26	38452	SEAL	1	RUBBER - WATER INLET TUBE	1,2
29	12	38453	WASHER, NYLON - WATER PU	1		
30	25	20273	RING	1	RUBBER - CENTRIFUGAL SLING	1,2
31	10	79953	SCREW, GREASE FILLER	1		
31	22	67892	SCREW, DRAIN (MAGNETIC)	1		
32	12	20260	WASHER, GREASE FILLER ANC	2		
35		76063A 1	SHAFT ASSEMBLY, SHIFT - LO	1		
36	52	28641	CLIP, RETAINING, SHIFT SH	1		